



**RM4 PLOW MOUNT INSTRUCTIONS**  
**KAWASAKI MULE PRO FXT**  
**PART # 4501-0791**

PART#	QTY	DESCRIPTION
2495-100	1	RM4 Plow mount
KD200	1	Removable Mount
HDW2065	2	5/16 x 4-1/4 x 2-3/4 Sq. U-Bolt
HDW2100	2	3/8 x 1 Hex Bolt
HDW9001	4	3/8 Flat Washer
HDW7061	2	3/8 Nylock Nut
HDW9002	4	5/16 Flat Washer
HDW7058	4	5/16 Nylock Nut
HDW9185	1	1/2 Cotterless Hitch Pin
In push tube	2	1/2 Hex Jam Nut
In push tube	2	1/2 x 2 Hex Bolt

*The RM4 mount kit is designed to allow for removal when not needed for plowing. The mount design uses the machine's front bumper and frame member to push against and distribute the load when plowing. See below for installation instructions for the mount kit.*


Place the 5/16 x 2-3/4 x 4-1/4 square u-bolts around frame at an angle as illustrated.

Hold plow mount up in place and attach to the u-bolts with the 5/16 nylock nuts and washers. Leave loose at this time.

Lift back of mount up into place and attach with the 3/8 x 1 hex bolts, washers and nylock nuts. Align and tighten securely.

Removable mount will slide in and pin in place with the 1/2" hitch pin

You should remove the plow mount for trail riding.

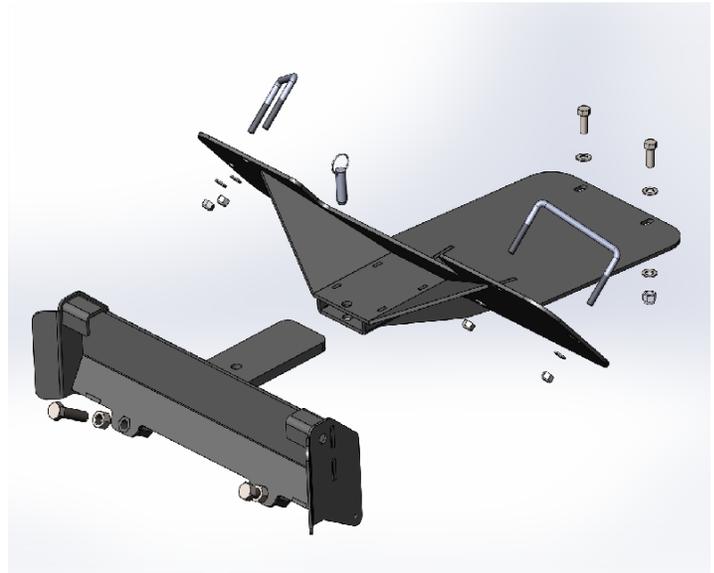

**FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).**

INST2495PF