

HONDA PIONEER 1000-5 PLOW MOUNT PART# 4501-0640


ITEM	PART#	QTY.	DESCRIPTION
1	2782-100	1	Plow Mount Weldment
2	HDW2100	2	3/8 x 1 Hex Bolts
3	HDW7060	2	3/8 Serrated Flange Nut
4	HDW9001	2	3/8 Flat Washer

Under the machine remove the front frame connector bolt where the plow will attach as shown in the lower picture.


Attach plow mount as shown with the bolt you removed. Do not tighten at this time.

Swing plow mount up in front and attach the front portion aligning the holes in mount up with the holes in the frame tube. Use the 3/8 x 1 hex bolts with washers going up through the mount and into the frame and use the 3/8 wiz nut on the inside to secure down. Tighten all bolts securely.

Push tube will pin up to mount tabs with wire loop pins included with push tube kit.

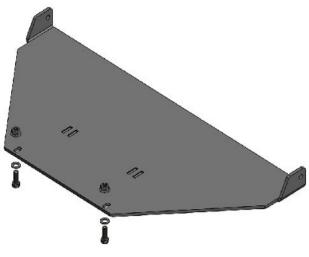



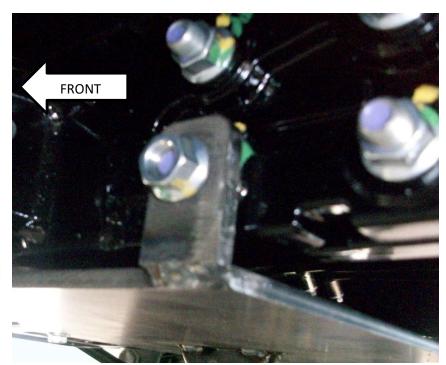

QUESTION COMMENTS CALL 320-964-1616 7:00 to 4:30 CST Mon. – Thur.

INST2782PF