



| Qty. | Part # | Description |
|------|---------|---------------------------------|
| 1 | FG741 | Winch Mount |
| 4 | HDW2150 | 5/16" X 1-1/8" X 1-3/4" U-Bolts |
| 2 | HDW2050 | 5/16" X 3/4" Hex Bolts |
| 10 | HDW7058 | 5/16" Nylock Nuts |

NOTE: Roller fairlead not included with this kit!


Winch Mount Installation Instructions

for 98-01 Yamaha YFM600 Grizzly 4x4

Part Number: 1541M (4505-0370)

INSTRUCTIONS:

1. Temporarily remove the front bumper assembly by taking out the (6) 8mm bolts and (2) 6mm bolts securing the bumper to the frame.
2. Install the winch to the winch mount with the wire rope running out the bottom, using the hardware provided with the winch.
3. Install the roller fairlead using (2) 5/16" x 3/4" hex bolts and (2) 5/16" nylock nuts provided (rollers should turn freely). NOTE: Bottom roller may need to be removed to run wire rope through.
4. Install the winch/mount assembly to the vertical frame tubes (per the illustration) using (4) U-Bolts and (8) nylock nuts provided. NOTE: Upper U-Bolts should be installed on the top side of the steering stem supports. Tighten all bolts and nuts securely.
5. Using the instructions provided with the winch, wire accordingly.

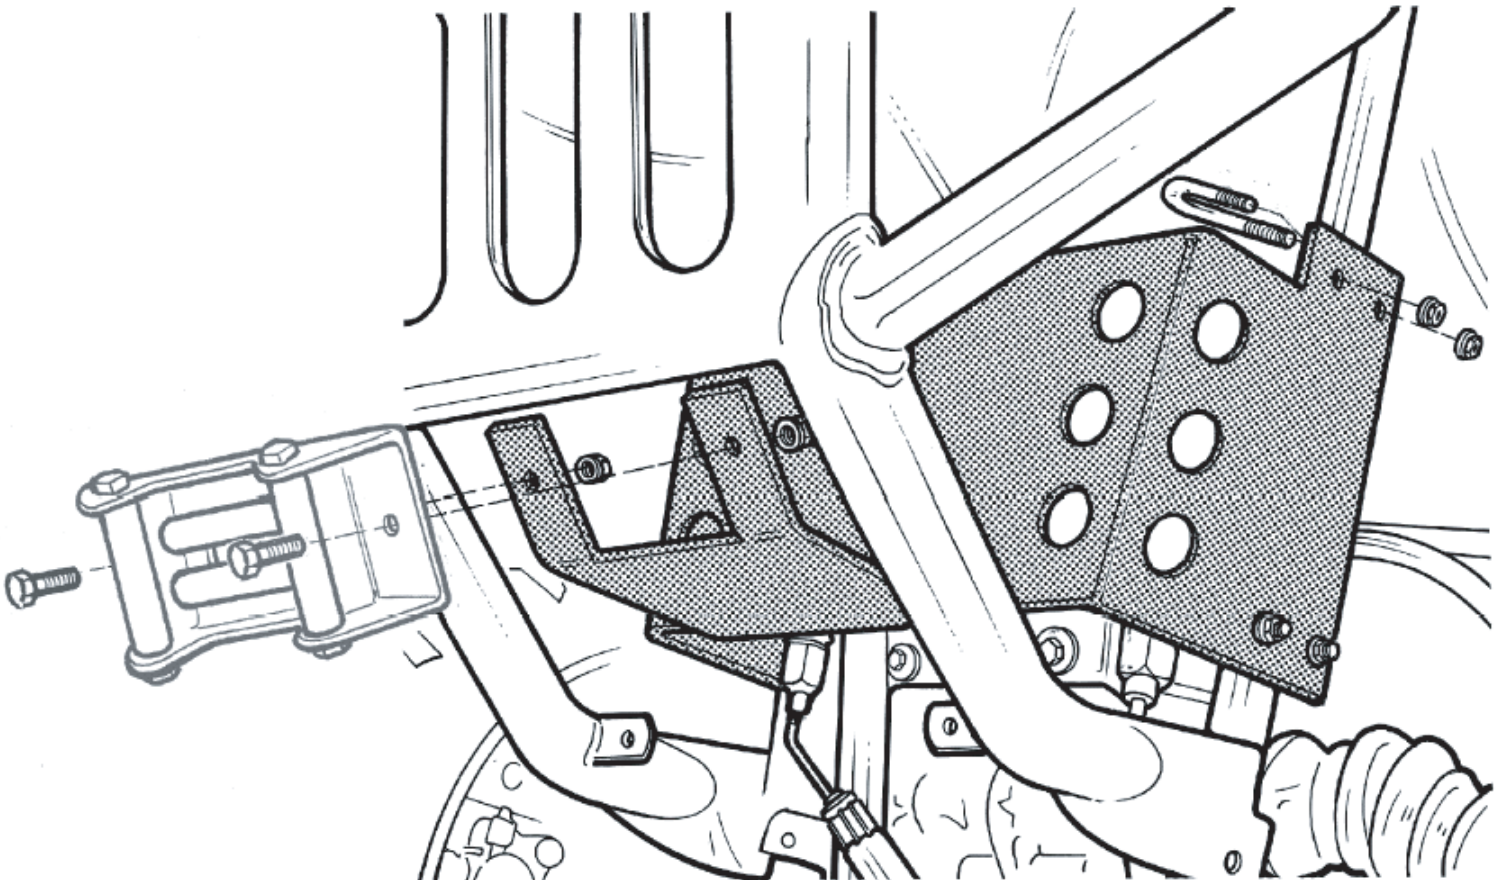

FOR QUESTIONS OR COMMENTS PLEASE CALL THE MANUFACTURER: **763-689-4800**

All images used are copyrighted property of CMP and may not be used without permission. Inst1541M 05/11/05