



Winch Mount Installation Instructions

2000-02 Yamaha Kodiak 400 Ultramatic


Part Number: 1542M (4505-0371)

Qty.	Part #	Description
1	FG746	Winch Mount
1	FG747	Fairlead Mount
2	HDW1054	8mm x 25mm Hex Bolts
2	HDW2106	3/8" x 3/4" Hex Bolts
4	HDW2050	5/16" x 3/4" Hex Bolts
4	HDW7058	5/16" Nylock Nuts
2	HDW7061	3/8" Nylock Nuts
2	HDW9002	5/16" Flat Washers

NOTE: Roller fairlead not included with this kit!

INSTRUCTIONS:

1. Remove the front skid plate from the bumper/frame.
2. Install the winch mount to the inside of the bumper using the provided (2) 3/8" bolts and Nylock nuts through the top outside mounting holes and the (2) 8mm bolts and 5/16" Flat washers through the bottom holes into the frame.
3. Install the winch to the inside of the winch mount using the hardware provided with the winch. Orientate the winch motor so the wire rope spools off the top of the winch spool.
4. Install the roller fairlead to the fairlead mount using (2) 5/16" x 3/4" bolts and (2) 5/16" Nylock nuts provided, then to the winch mount with the (2) provided 5/16" nuts and bolts (rollers should turn freely). The fairlead can be mounted to either side of the fairlead mount plate. If you are using your winch to lift a plow blade, we recommend that it be mounted so the fairlead leans out towards the front. **Note:** Bottom roller may need to be removed to run wire rope through.
5. Now reinstall the front skid plate.
6. Using the instructions provided with the winch, wire accordingly.

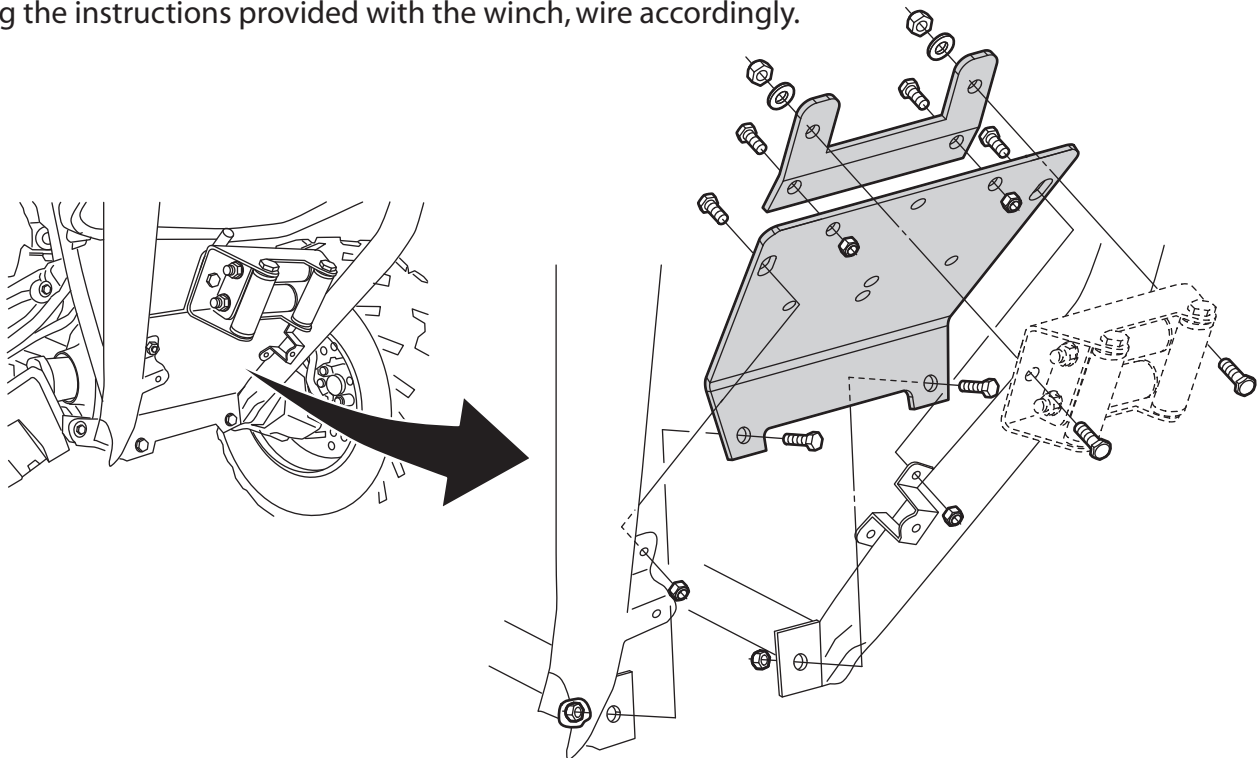

FOR QUESTIONS OR COMMENTS PLEASE CALL THE MANUFACTURER: **763-689-4800**

All images used are copyrighted property of CMP and may not be used without permission.

Inst1542M 05/20/05