



Qty.	Part#	Description
1	FG3139	Winch Mount
4	HDW2050	5/16" X 3/4" Hex Bolts
4	HDW9002	5/16" Flat Washers
2	HDW1054	8mm X 25mm Hex Bolts
4	HDW7058	5/16" Nylock Nuts

NOTE: Roller fairlead not included with this kit!


Winch Mount Installation Instructions

Yamaha '02-'08 YFM 660 Grizzly

Part Number: 1546M (4505-0374)

INSTRUCTIONS:

1. Temporarily remove the top bolts that hold the plastic bumper guard in place.
2. Position the winch mount behind the front bumper, on the inside of the frame tabs, and align the holes in the winch mount with the holes in the frame. Install the 5/16" bolts and (2) flat washers down through the winch mount then through the frame tabs and install the Nylock nuts. Install the (2) 8mm bolts and (2) flat washers through the bottom holes in the winch mount then into the frame.
3. Install the winch to the mount using the hardware provided with the winch.
4. Install the roller fairlead using (2) 5/16" x 3/4" hex bolts and 5/16" Nylock nuts provided (rollers should turn freely). **Note:** Bottom roller may need to be removed to run wire rope through.
5. Using the instructions provided with the winch, wire accordingly.

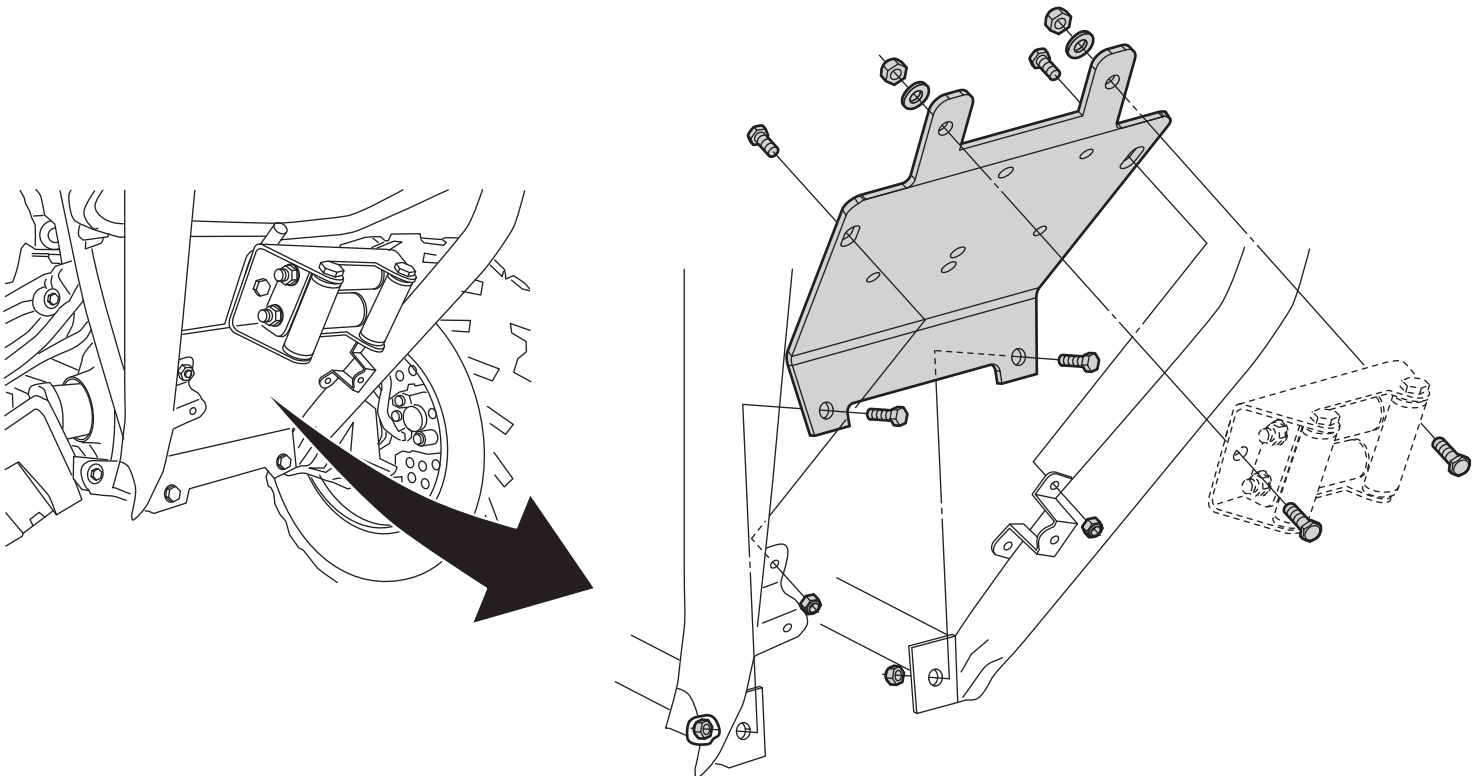

FOR QUESTIONS OR COMMENTS PLEASE CALL THE MANUFACTURER: **763-689-4800**

All images used are copyrighted property of CMP and may not be used without permission. Inst1546M 08/17/07