



Winch Mount Installation Instructions

2014 Honda Pioneer
2014 Honda Pioneer-4


Ref.	Qty.	Part #	Description
1	1	1614-01	Winch Mount Plate
2	4	HDW2079	5/16" x 1-1/2" x 2-3/16" Sq. U-Bolts
3	8	HDW9002	5/16" Flat Washers
4	8	HDW7058	5/16" Nylock Nuts

NOTE: Roller fairlead not included with this kit!

Part Number: 4505-0530

INSTRUCTIONS:

1. Remove the steel front bumper assembly from the machine. Put the bumper on a workbench as you will be installing the winch to the inside of the bumper.
2. Slide the winch mount in place between the two main arms of the bumper. Make sure it is within 1" of the front of the bumper so the back of the mount does not interfere with re-installation of the bumper. The winch will hang upside down from the mount. Loosely install the mount to the bumper arms using four 5/16" u-bolts (#2), washers (#3), and nylock nuts (#4). Do not tighten yet.
3. There are multiple winch bolt patterns built into this mount to accommodate most winches. The winch will be placed on the mount upside down but with the cable still coming off the bottom of the drum. Using the bolts that came with your winch, loosely bolt the winch to the bottom of the mount plate.
4. Take the bumper and winch assembly and position it back into place on the machine. Tighten all the bolts for the bumper. Now slide the winch mount back until it butts up against the machine side bumper tubes. You can now tighten all the winch and winch mount hardware.
5. The winch mount has two sets of bolt holes to fit most roller fairleads or aluminum haswells. Use whichever pattern lines up with your fairlead or hawse. Bolt in place using the hardware supplied with your fairlead.

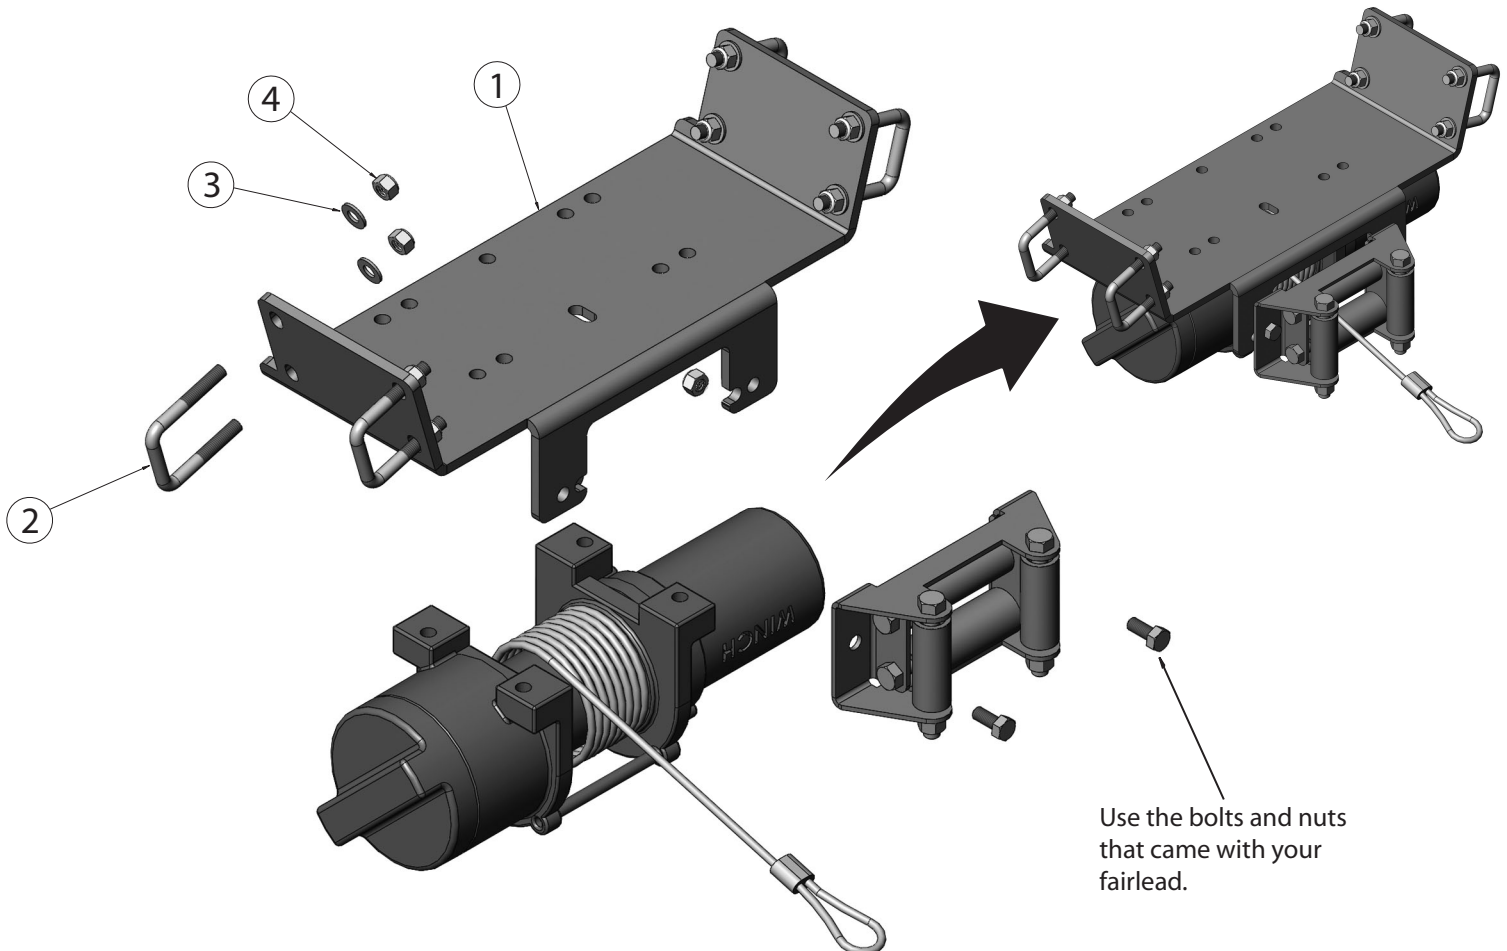

FOR QUESTIONS REGARDING YOUR ORDER OR RETURNS PLEASE CONTACT THE COMPANY YOU PURCHASED IT FROM.

FOR TECHNICAL OR INSTALLATION QUESTIONS PLEASE CALL THE MANUFACTURER: **763-689-4800**

All images used are copyrighted property of CMP and may not be used without permission.

Inst1614M 09/30/2013



Winch Mount Installation Instructions

Honda Pioneer


Part Number: 4505-0530

PAGE 2



Use the included u-bolts to attach the mount to the arms of the front bumper.

The winch will hang upside down from the mount. Keep the cable coming off the bottom of the drum.

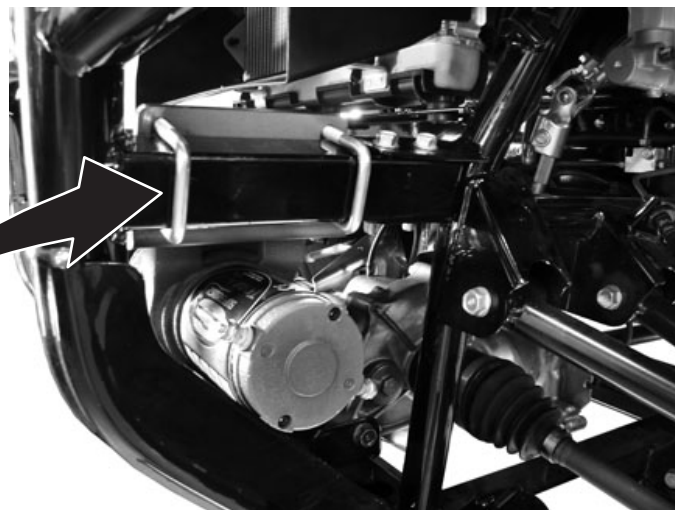

Bolt the mount to the frame using two u-bolts, flat washers and nylock nuts.



The roller fairlead can be installed in either set of bolt holes. Simply match up your fairlead with a set of holes and bolt in place using the hardware that came with your fairlead.



FOR QUESTIONS REGARDING YOUR ORDER OR RETURNS CONTACT THE COMPANY YOU PURCHASED FROM.
FOR TECHNICAL OR INSTALLATION QUESTIONS PLEASE CALL: **763-689-4800**

All images used are copyrighted property of CMP and may not be used without permission. Inst1614M 08/23/2013