

# INSTALLATION INSTRUCTIONS

## DRAG SPECIALTIES TOUR BOX PAD

**ATTENTION INSTALLER** (if other than owner): Please forward this Instruction Sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

**INTRODUCTION:** These instructions describe the procedure for properly installing Drag Specialties Tour Box pads.

Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

**NOTE: A NOTE** provides key information to make procedures easier or clearer.

**CAUTION: A CAUTION** indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

**WARNING!: A WARNING** indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

### ABOUT SOLAR REFLECTIVE LEATHER

Solar Reflective Leather is available on **0822-0138** and **0822-0139**.

Solar reflective leather keeps the seating area cool even in direct sunlight. The process has been shown to reduce surface temperatures by as much as 25°F.

**CAUTION:** Use of leather conditioners or chemicals will void warranty.

**CLEANUP:** Warm water, mild soap and a soft cloth should be used for cleanup.


### REMOVAL PROCEDURE

1. Open the Tour Box and remove the six hex nuts that fasten the pad to the lid. Remove the pad. These hex nuts will not be reused.

**NOTE:** On 2006 and later models, the lower pad will need to be removed from the lower part of the box.



0822-0138

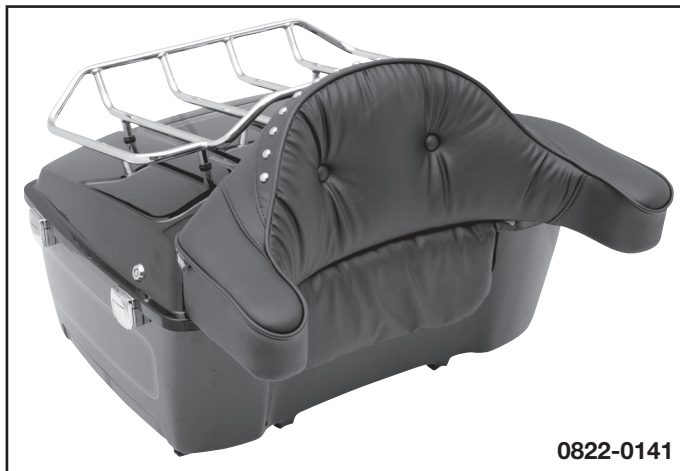

0822-0141

### INSTALLATION PROCEDURE

Your new Tour Box pad comes with all hardware attached. Remove the six hex nuts and one of the two rubber pads from each pair of studs. The center pair of studs will move up and down. The up position will be for 2006 and later models and the lower position will be for 2005 and earlier models. On earlier models, some drilling may be required. The outer studs do have limited adjustability.

1. With rubber mount pad on each pair of studs, line up the mount studs with the box holes working from side to side, ensuring all studs are through all six holes.
2. Place one additional rubber pad over the studs on the inside of the box and install the six hex nuts; torque to 25 inch/pounds.



3501 Kennedy Rd, PO Box 5222, Janesville, WI 53547-5222  
010441