

INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES/HOTOP DESIGNS PASSENGER FLOORBOARD INSERTS P/N 1621-0307/0308

ATTENTION INSTALLER (if other than owner): Please forward this Instruction Sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

INTRODUCTION: These instructions describe the procedure for properly installing the Drag/Hotop Passenger Floorboard Inserts.

Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING!: A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

TOOLS REQUIRED:

Scribe or small center punch
Drill motor and 1/4" drill bit
5/32", 1/4", 5/16" hex key wrench
Blue or low-strength locking adhesive

PROCEDURE:

1. Remove passenger floorboard assemblies from frame with the 1/4" and 5/16" hex keys.
2. Remove rubber pad from floorboard base. **(FIGURE 1)**. Push rubber nubs on bottom of floorboard through floorboard base with screwdriver. Make sure the hinge pins are correctly located and centered.



(FIGURE 1)



NOTE: If removing the floorboard base from the mounting bracket, use caution not to lose the detent ball and spring that holds the floorboard in the up position. Removal of the floorboard base from the mounting bracket is not required to install the floorboard inserts.

3. Place the Hotop floorboard insert on the floorboard base.
4. Turn assembly over so bottom of floorboard base is on top.
5. Place drill template on bottom of floorboard, aligning the two large holes with the two holes closest to the outer edge of floorboard. **(FIGURE 2)**. Secure with two 10-24 button head screws finger tight.




(FIGURE 2)



INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES/HOTOP DESIGNS PASSENGER FLOORBOARD INSERTS P/N 1621-0307/0308

6. Make sure floorboard insert is parallel with inner edge of floorboard and the outer edge is even all the way around. (FIGURE 3).

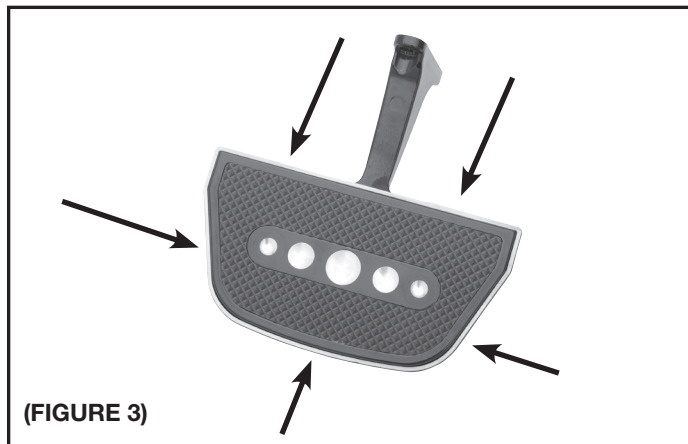

7. Tighten the two 10-24 button head screws.

8. Mark the center template with a small punch or scribe. (FIGURE 4).



9. Remove all pieces, center punch the center mark and drill a 1/4" hole all the way through the floorboard base. Deburr the hole just drilled. (FIGURE 5).



10. Install the floorboard insert with three button head screws, using a thread adhesive locking compound (blue) on all three screws. Make sure to center the insert for best appearance before final tightening of the three button head screws. (FIGURE 6).



11. Remount floorboard assembly onto motorcycle frame using original hardware.

12. Repeat Steps 2 through 11 for the other floorboard assembly.

WARNING!: Before operating motorcycle, be sure all hardware is tight.

