INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES SIDE PLATES & SISSY BARS P/N DS-263622

ATTENTION INSTALLER: (if other than owner): Please forward this instruction sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

INTRODUCTION: These instructions describe the procedure for properly installing Drag Specialties Sissy Bars with these Side Plates onto 86-96 FLST models.

Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: (shaded) A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING: (boxed and shaded) A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

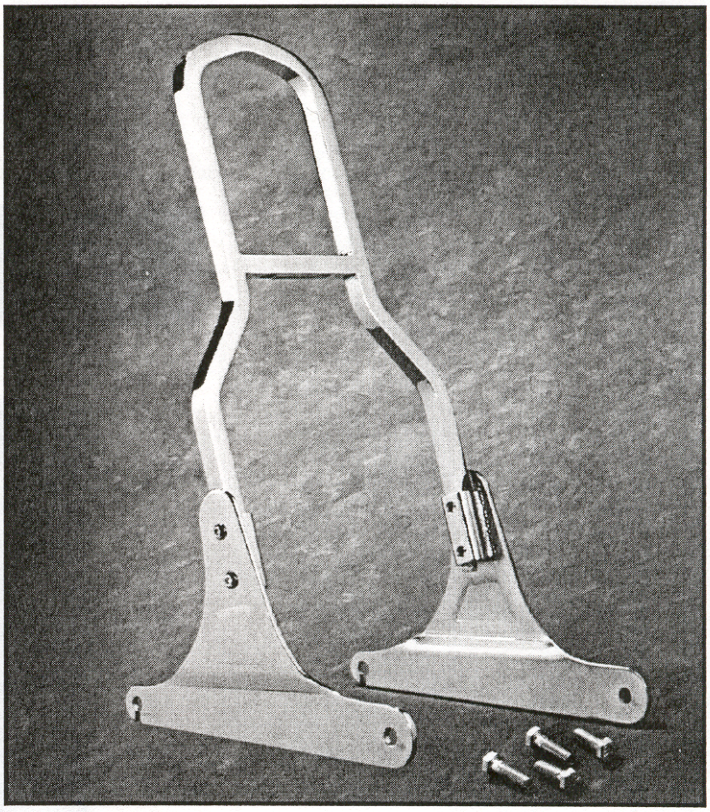

TOOLS REQUIRED:
9/16" combination wrench
5/32" Hex key

PROCEDURE:

1. Attach the Sissy Bar to the Side Plates, using the button head screws provided. These screws should be installed through the outside of the Side Plates.

2. Remove the two center OEM bolts holding the fender to the fender braces on each side.

3. Slide the complete assembly onto the outside of the fender braces. Attach using the provided 3/8-16 x 1 1/2" hex head screws. On models with saddlebags, use the OEM screws. Tighten SECURELY.

4. On 90-96 FLSTF models use two of the provided 3/8-16 x 1 1/2" screws in the front positions. The rear is secured by the OEM turn signal stalk. The side Plates are slotted to allow the turn signal wires to pass through without disconnecting them.

WARNING: Before operating motorcycle, be sure all hardware is tight.

DRAG® SPECIALTIES

Box 9336, Minneapolis, MN 55440