

INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES/HOTOP FLTR FAIRING COMPARTMENT LINERS P/N 2330-0091

ATTENTION INSTALLER (if other than owner):

Please forward this Instruction Sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.


INTRODUCTION: These instructions describe the procedure for properly installing the fairing compartment liners on FLTR Road Glide fairings. Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING!: A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

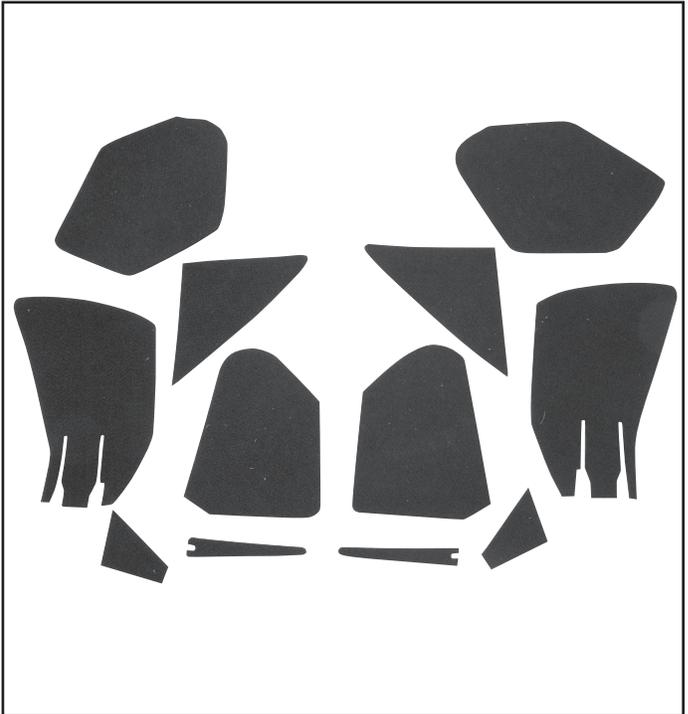

PROCEDURE:

1. Remove all items from inside of the fairing compartments.
2. Clean the inner surfaces of the compartments with alcohol or similar to remove any dirt or grease from the fairing compartment surfaces.
3. Each compartment consists of six individual liner pieces, for a total of twelve pieces per bike. Test fit all liner pieces into the compartments without removing the paper backing.

NOTE: Each piece is clearly marked on the paper side as to where it should be installed. Before removing any of the backing, place the pieces in the compartment and arrange as shown below to familiarize yourself with the location of each piece. It is difficult to move the liner once it is stuck down.

4. Install the pieces in the following order: bottom, #1; front, #2; outside, #3; inside, #4; rear, #5; and lid, #6. See photo for correct orientation.

NOTE: Lay out liner pieces as shown in the photo. Place all with the fuzzy side up except for the door liners, which are fuzzy side down.

5. Once you are comfortable with how each piece is fitting into the compartment, remove a portion of the backing paper from the bottom piece.
6. Starting in the center of the piece, stick it to the fairing surface, then work your way to the edges. The material can be stretched slightly if necessary to make it conform to the other pieces.
7. Remove the rest of backing paper and stick it down to the rest of the surface, again working from the center of the piece toward the edges.
8. Repeat with the other pieces in the order stated above, taking care to make sure the edges of each piece meet with the other pieces. Firmly press the entire surface area of each liner piece to the compartment surface.
9. Repeat for the other compartment.




INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES/HOTOP FLTR FAIRING COMPARTMENT LINERS P/N 2330-0091

10. Let the bike sit overnight to allow the adhesive to cure completely.

WARNING!: Before operating the motorcycle, be sure all of the hardware is tight.

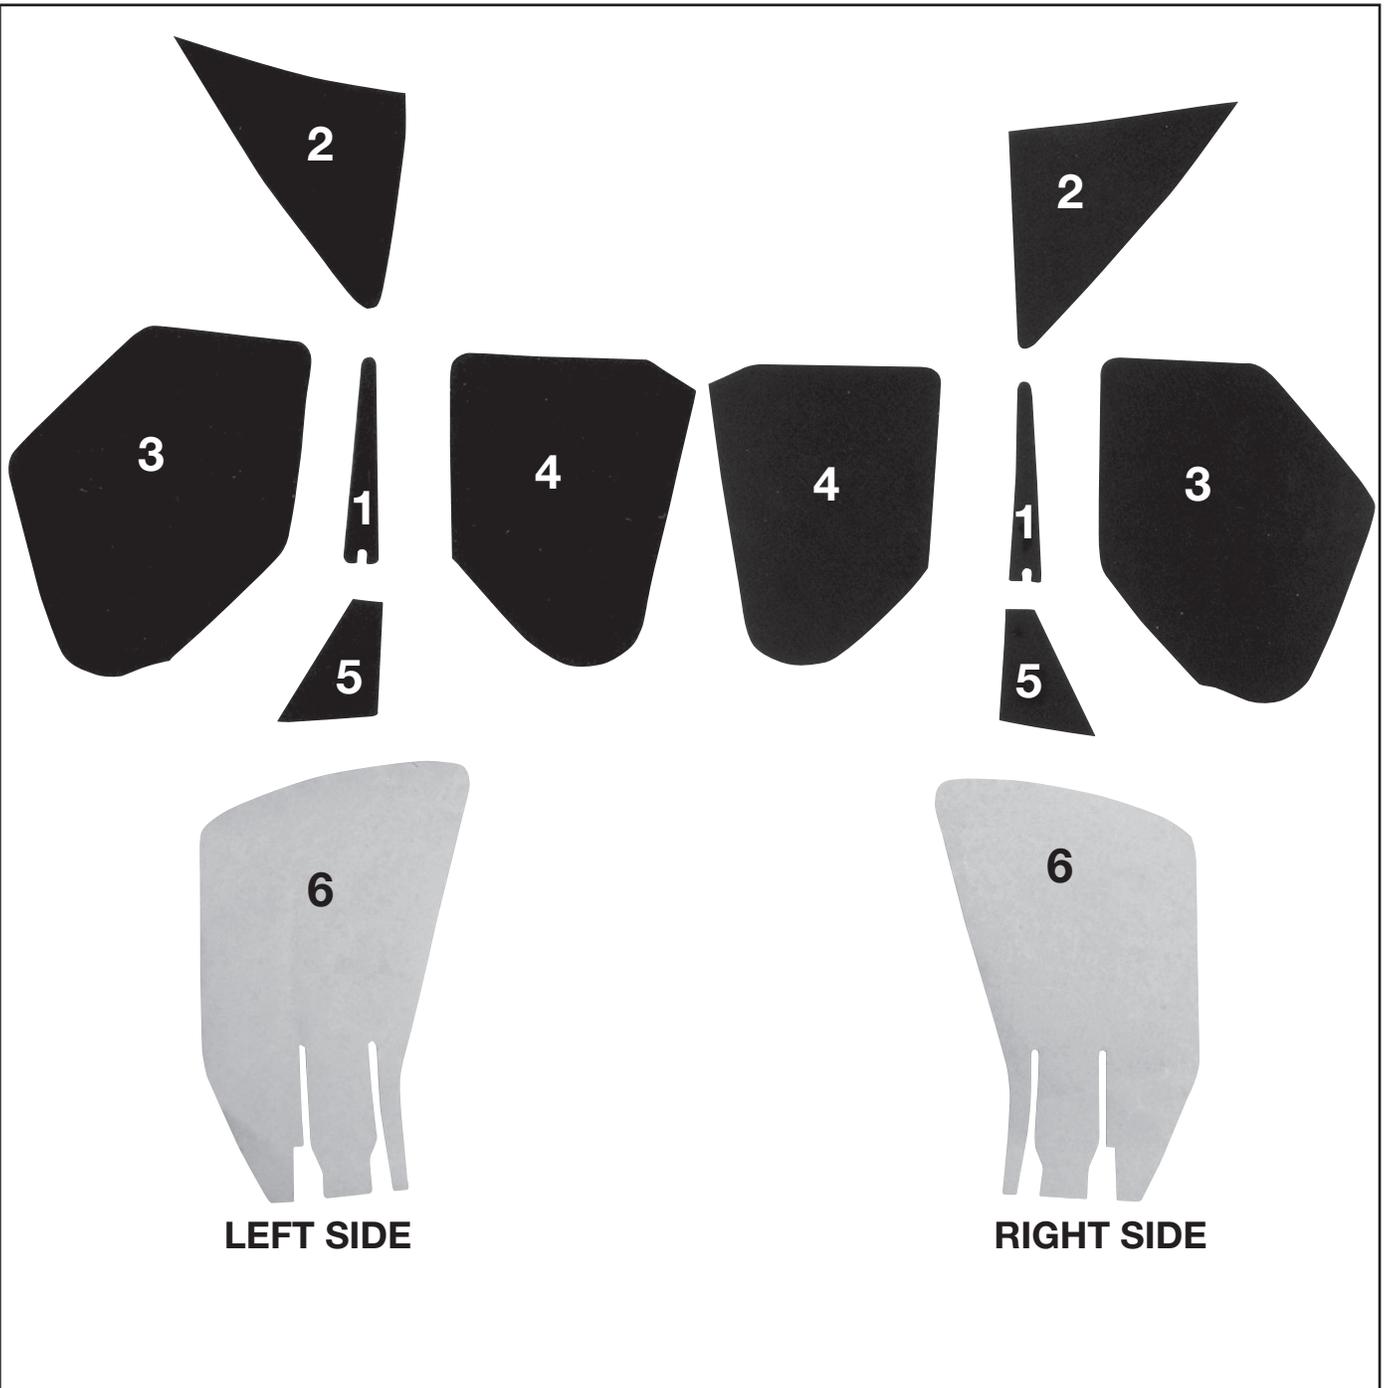

3501 Kennedy Rd, PO Box 5222, Janesville, WI 53547-5222
010493