

INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES SISSY BAR PADS WITH DUAL MOUNTING BRACKETS

ATTENTION INSTALLER (if other than owner): Please forward this Instruction Sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

INTRODUCTION: These instructions describe the procedure for properly installing Drag Specialties Sissy Bar Pads.


Review these instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING! A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

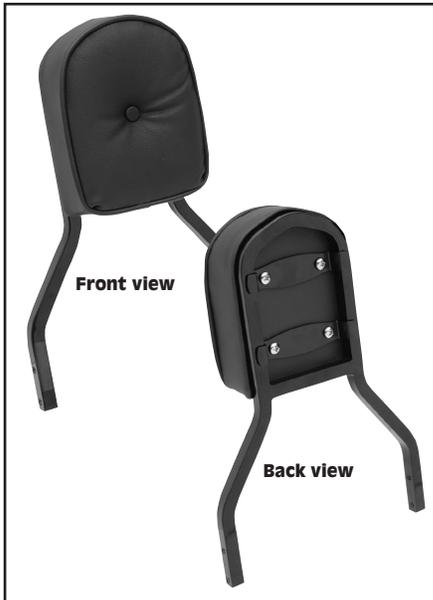

TOOLS REQUIRED:

Phillips screwdriver

PROCEDURE:

1. Remove the two rear brackets and four screws.

NOTE: Use of a medium threadlocker on each screw is recommended.

2. Position pad over bar, noting that sides and top of the pad will slightly wrap around the bar.

3. Install brackets and screws that were previously removed. Tighten screws so pad will move with some resistance. Slide pad down so upper lip is snug against the top of the sissy bar and tighten screws.



REVISED 08/2016

3501 Kennedy Rd, PO Box 5222, Janesville, WI 53547-5222
P/N 010007

Page 1 of 1

INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES SISSY BAR PADS WITH DUAL MOUNTING BRACKETS

ATTENTION INSTALLER (if other than owner): Please forward this Instruction Sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

INTRODUCTION: These instructions describe the procedure for properly installing Drag Specialties Sissy Bar Pads.


Review these instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING! A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

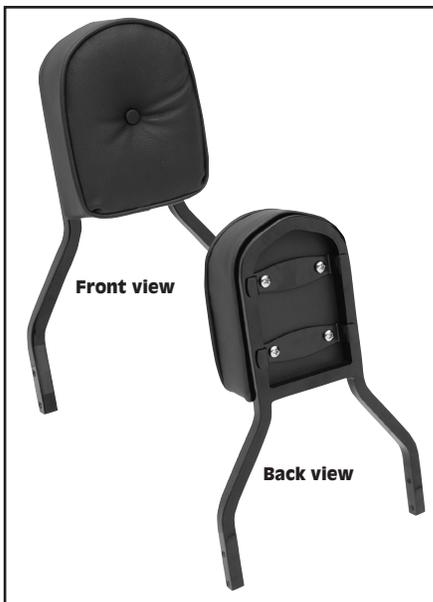

TOOLS REQUIRED:

Phillips screwdriver

PROCEDURE:

1. Remove the two rear brackets and four screws.

NOTE: Use of a medium threadlocker on each screw is recommended.

2. Position pad over bar, noting that sides and top of the pad will slightly wrap around the bar.

3. Install brackets and screws that were previously removed. Tighten screws so pad will move with some resistance. Slide pad down so upper lip is snug against the top of the sissy bar and tighten screws.



REVISED 08/2016

3501 Kennedy Rd, PO Box 5222, Janesville, WI 53547-5222
P/N 010007

Page 1 of 1