

INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES SEATS FOR 2008-UP FL, FLHR

ATTENTION INSTALLER (if other than owner): Please forward this instruction sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

INTRODUCTION: These instructions describe the procedure for properly installing Drag Specialties seats onto FL models.

Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING!: A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

SOLAR REFLECTIVE TECHNOLOGY

Solar Reflective Leather keeps the seating area cool even in direct sunlight. The process has been shown to reduce surface temperatures by as much as 25°F.

NOTE: The Solar Reflective Technology is only available on select models. See catalog for specific applications.

CAUTION: Use of leather conditioners or chemicals will void warranty.

Cleanup: Warm water, mild soap and a soft cloth should be used for cleanup.

NOTE: The saddlebags may need to be removed to access and remove the seat hand strap.

TOOLS REQUIRED:

#2 Phillips screwdriver
7/16" open-end wrench

PROCEDURES:

1. Begin by placing bike on the side stand.
2. Remove the stock seat from the bike. **SAVE** the rear Phillips-head screw, it will be reused.

NOTE: On 2010 and later models, remove the two frame-seat bumper mounts located on the top of the frame (one on each side); these will not be reused. Some models may not be equipped with these bumpers.

3. Install seat, positioning rear bracket to line up with hole in fender. Remove seat and tighten the screws holding the bracket.
4. Reinstall seat and attach the rear bracket to fender reusing the stock mounting screw.

DRAG SPECIALTIES

BACKREST SEAT MODEL ADJUSTMENTS

TOOLS REQUIRED:

10mm socket and wrench

PROCEDURES:

1. The pad assembly adjusts up and down by engaging into a series of detents.

WARNING!: Always make sure the pad is secure in a detent before operation. Do not attempt to adjust pad while operating the motorcycle.

WARNING!: While operating motorcycle with pad in passenger position, pad must be all the way down. Tighten receiver screw to secure pad and check screw before each ride.

CAUTION: When pad is not in use, store and handle pad with care to prevent damage.




PROCEDURES (CONTINUED):

2. Tighten U-mounts to maintain the desired resistance. (REF. A)

CAUTION: Do not operate motorcycle if bolts are loose to the point of vibration.

3. Adjust knurled knob for the desired angle. (REF. B)

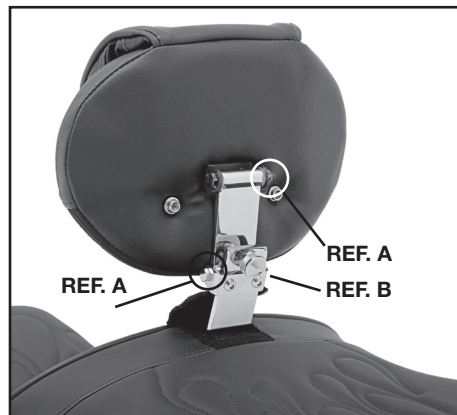

HARDWARE

490694A	Snap screw stud
438884	Nylon washer
489918B	U-mount, black
424158	6mm Hex screw, black
424157	6mm Hex nut, chrome
489918	U-mount, chrome
424154	6mm Hex screw, chrome
424155	6mm Hex nut, chrome
420420	Knurled knob
489917	3 1/2" Dog bone
424156	6mm x 10mm button-head screw, chrome

Detent bar may vary; supply seat part number or application.



3501 Kennedy Rd, PO Box 5222, Janesville, WI 53547-5222
010396