

INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES SEATS FOR VICTORY 2010-UP CROSS ROADS AND CROSS COUNTRY MODELS

ATTENTION INSTALLER (if other than owner): Please forward this instruction sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

INTRODUCTION: These instructions describe the procedure for properly installing Drag Specialties seats on Victory Cross Country and Cross Roads models.

Review these instructions carefully before beginning as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING!: A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

SOLAR REFLECTIVE TECHNOLOGY

Solar Reflective Leather keeps the seating area cool even in direct sunlight. The process has been shown to reduce surface temperatures by as much as 25°F.

NOTE: The Solar Reflective Technology is only available on select models. See catalog for specific applications.

CAUTION: The use of leather conditioners or chemicals will void warranty.

Cleanup: Warm water, mild soap and a soft cloth should be used for cleanup.

TOOLS REQUIRED:

6mm Allen wrench
10mm wrench or socket

PROCEDURES:

REMOVING YOUR SEAT

1. Begin by placing the bike on a side stand.
2. Remove the right and left side covers.
3. Remove the 8mm Allen head bolt on each side securing the front seat bracket.
4. Lift the front of the seat up and pull forward to release the rear bracket from frame mount and remove the seat.

PREPARING YOUR NEW SEAT

5. Place a towel down on a clean surface. Turn your new seat over and remove the four 6mm Hex head screws (two screws on each side midway up the seat). Install the seat base wings, noting that there are right and left sides.



NOTE: The corner opposite the bolt holes points towards the rear of the seat. Install bolts and tighten.



INSTALLING YOUR NEW SEAT

CAUTION: In the next step, carefully guide the front mount during installation to avoid damage to the motorcycle.

6. Carefully align the rear of the seat and guide the rear bracket into the frame mount while lowering the front of the seat into position.
7. Install the side bolts previously removed and tighten.
8. Install the side covers.



LOW-PROFILE TOURING SEAT WITH OEM BACKREST MOUNT CAPABILITIES

See your local Victory dealer for the frame mount. If the Victory pad pushes you forward, Drag Specialties PART #0822-0135 will position the pad 1" farther back.

DRAG SPECIALTIES BACKREST SEAT MODEL ADJUSTMENTS

TOOLS REQUIRED:

10mm socket and wrench

PROCEDURES:

1. The pad assembly adjusts up and down by engaging into a series of detents.

WARNING!: Always make sure the pad is secure in a detent before operation. Do not attempt to adjust pad while operating the motorcycle.


WARNING!: While operating the motorcycle with the pad in the passenger position, the pad must be all the way down. Tighten the receiver screw to secure the pad and check the screw before each ride.

CAUTION: When the pad is not in use, store and handle the pad with care to prevent damage.

2. Tighten U-mounts to maintain the desired resistance (REF. A).

CAUTION: Do not operate the motorcycle if the bolts are loose to the point of vibration.

3. Adjust the knob for the desired angle (REF. B).

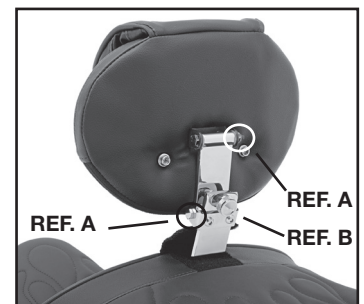

3501 Kennedy Rd, PO Box 5222, Janesville, WI 53547-5222
010915