



ITEM	QTY.	PART#	DESCRIPTION
1	1	2731-70	Plow Mount Plate
2	4	HDW2154	5/16 x 1-1/4 x 2 Rd. U-Bolt
3	8	HDW7058	5/16 Nylock Nut
4	8	HDW9002	5/16 Flat Washer

PLOW MOUNT INSTALLATION INSTRUCTIONS

02-11 Kawasaki 360 Prairie 4x4


PART# 4501-0601

Remove the factory skid plate underneath the engine.

Hang the U-bolts around the frame cross tubes at the corners of the skid plate as illustrated.

Slide the plow mount up over the U-bolts with the push tube mounting tabs going toward the front. Install the washers and nylock nuts. Align and tighten.

Push tube will mount between the tabs with hardware included in the push tube box.

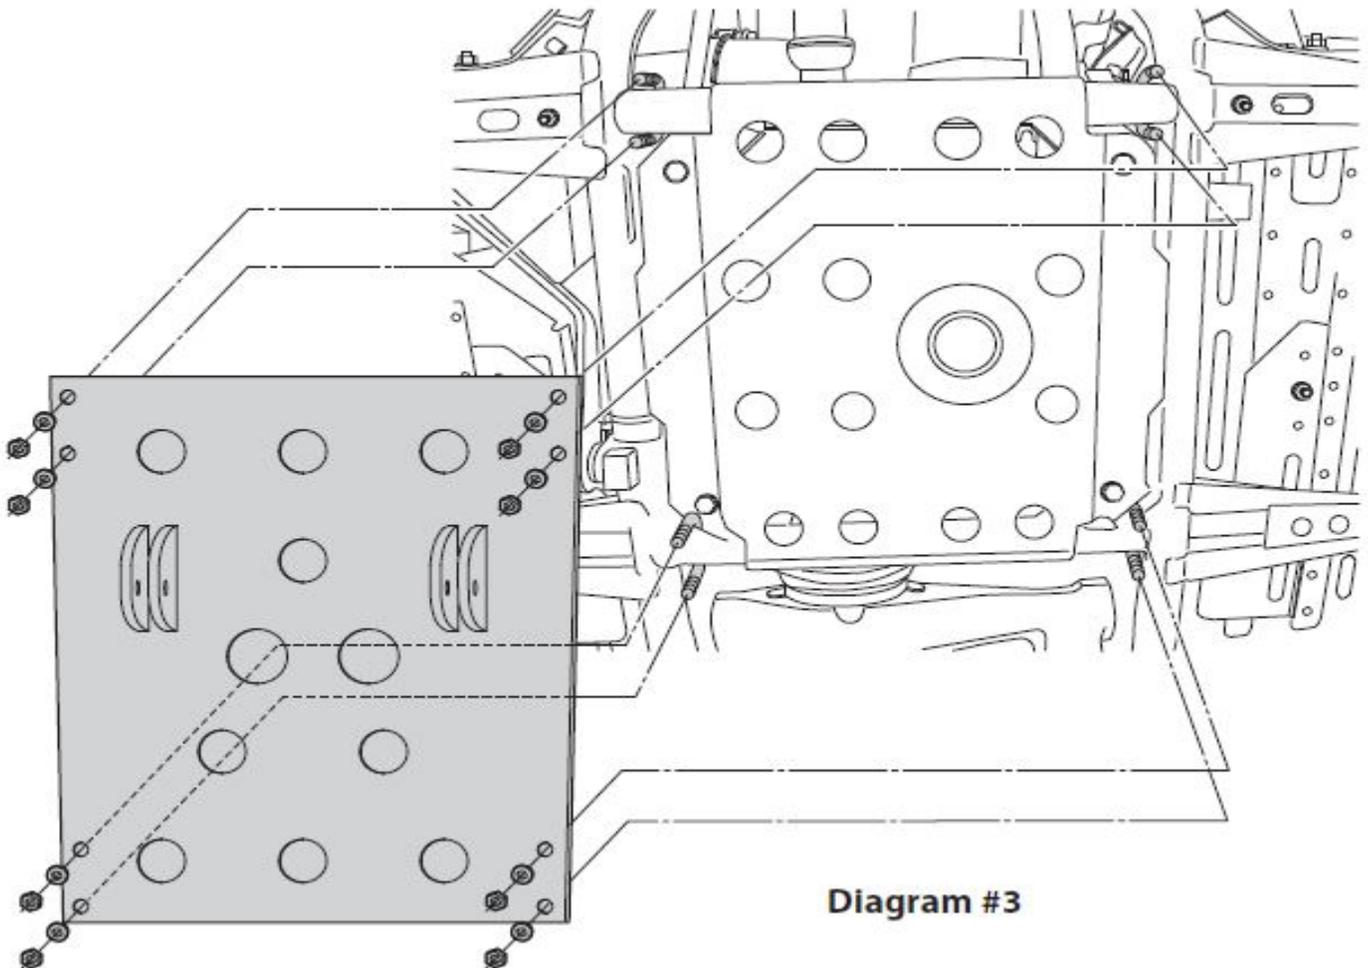

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).