



KAWASAKI 97-02 KVF 400 PRAIRE 4x4


PART# 4501-0605

| ITEM | PART# | QTY. | DESCRIPTION |
|------|---------|------|-----------------------------|
| 1 | 2737-70 | 1 | Bottom Plow Mount |
| 2 | 2737-2 | 2 | Bolt Retainer |
| 3 | HDW2064 | 2 | 5/16 x 1 Carriage Bolt |
| 4 | HDW9002 | 6 | 5/16 Flat Washer |
| 5 | HDW7058 | 6 | 5/16 Nylock Nut |
| 6 | HDW2154 | 2 | 5/16 x 1-1/4 x 2 Rd. U-Bolt |

PLOW MOUNT INSTALLATION INSTRUCTIONS

Install two 1" carriage bolts with the bolt retainers through the rear of the frame. Hang the two U-bolts over the front frame tubes as illustrated.

Install the bottom mount plate on the carriage bolts and the U-bolts. Secure with the 5/16" washers and nylock nuts. Align and tighten firmly.

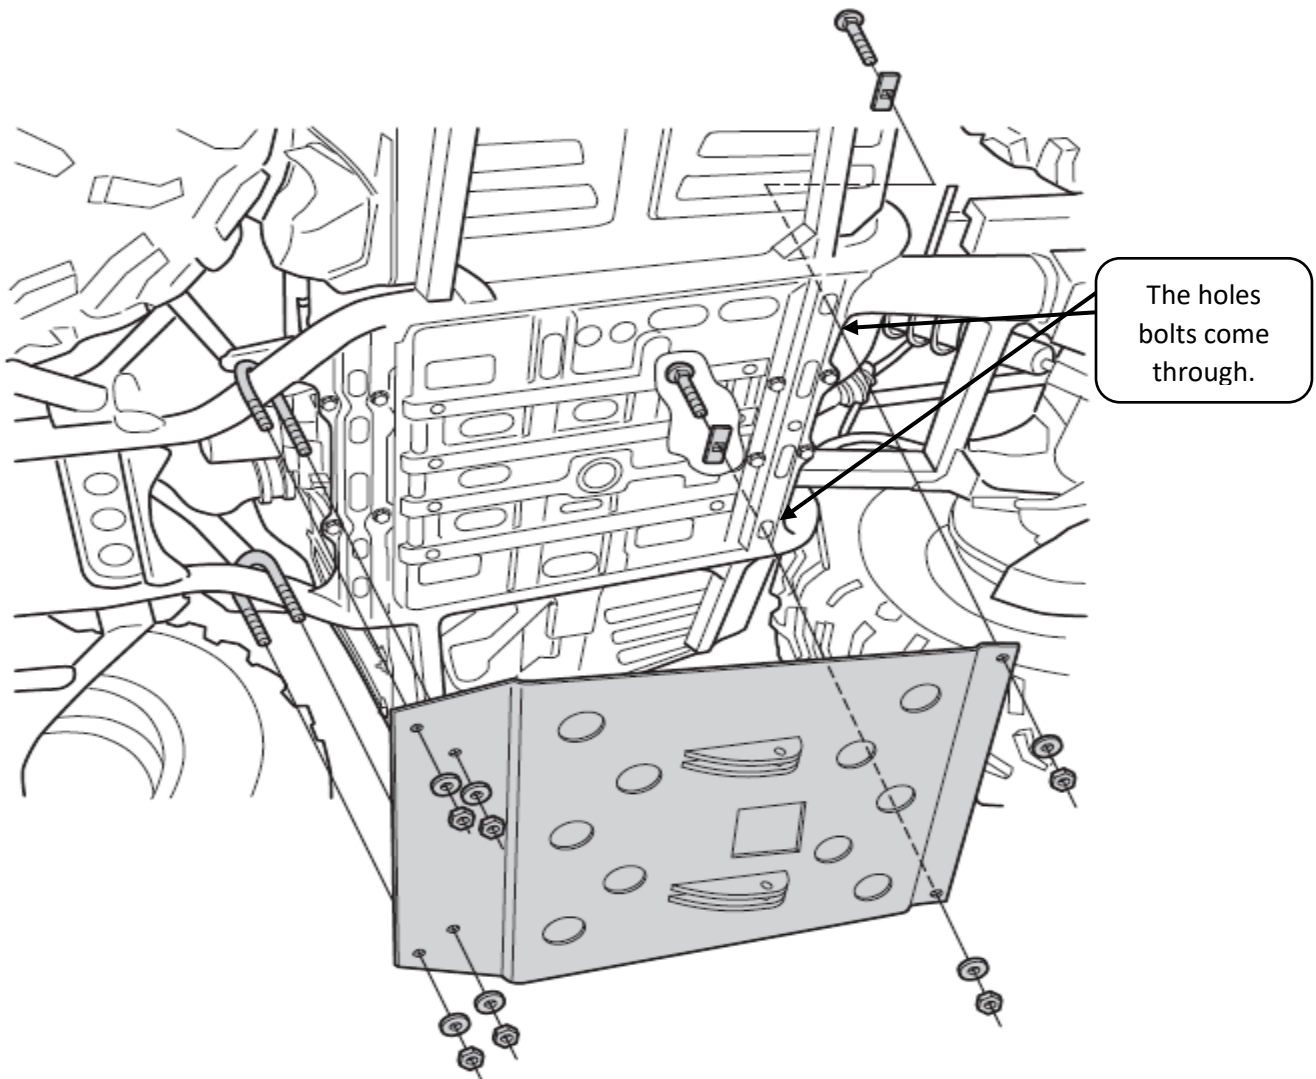

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (Monday through Thursday 7:00 – 4:30 CST).