



POLARIS

06-09 Sportsman 500 X2 & Touring
 2008 Sportsman 700 X2
 07-09 Sportsman 800 X2 & Touring

ITEM	PART#	QTY.	DESCRIPTION
1	2748-70	1	Plow Mount Weldment
2	2753-1	1	Extension Plate
3	HDW2155	4	5/16 x 1-1/8 x 2-1/4 Sq U-Bolt
4	HDW2050	3	5/16 x 3/4 Hex Bolt
5	HDW9002	10	5/16 Flat Washer
6	HDW7058	13	5/16 Nylock Nut
7	HDW2051	2	5/16 x 1 Hex Bolt

PART# 4501-0616

Remove the plastic floorboards and place the square u-bolts over the floorboard support tubes next to where they are welded to the main frame on the right as illustrated (left and right are as you were sitting on machine).


Install the 5/16" x 3/4" hex bolts into the center of all the three center holes except for the back right side. Place on nylock nuts and tighten. *(The bolt heads prevent the bottom mount from bowing.)*

Attach the extension plate to the mount using the 5/16" x 1" hex bolts with washers and nylock nuts.

Place left side u-bolts over frame tubes as shown. Attach the mount with the washers and nylock nuts. Swing mount up on the right side and attach right side with washers and nylock nuts. Align and tighten.

Re-install floorboards.

Push tubes will pin up to mount tabs with wire loop pins provided with push tube.

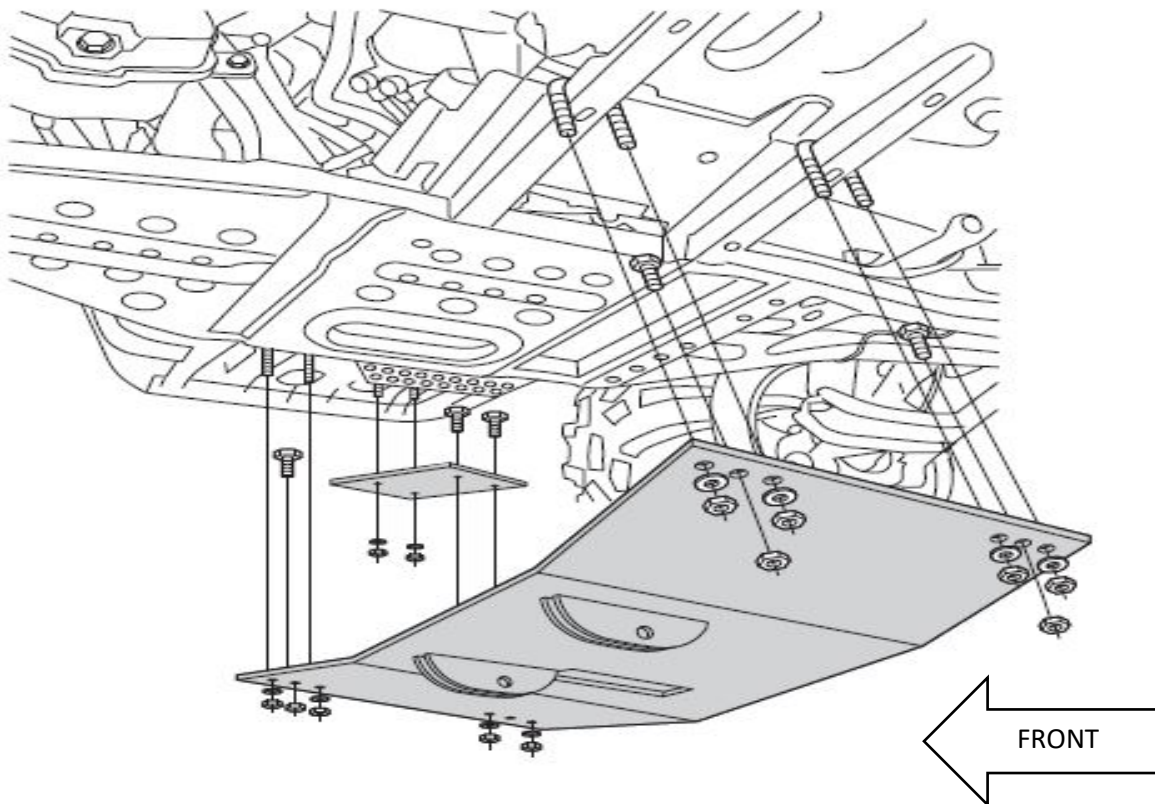

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).