



Yamaha
97 Big Bear 350 SE
93-98 YFM 400 Kodiak FWT
94-96 YFM 350 Big Bear FWT
BLADE HARDWARE
MOUNTING INSTRUCTIONS
PART: 4501-0619

ITEM	PART#	QTY:	DESCRIPTION
1	2775-70	1	Plow Mount Weldment
2	HDW1069	4	10mm x 30mm Hex Bolt
3	HDW9009	4	7/16 Split Lock Washer

Remove all four foot peg bolts and retain to use when you remove bottom mount plate.

Install the bottom mount plate with the drain hole location to rear and tabs toward the front.

Use the 10mm x 30mm hex bolt and the lock washer to install the mount plate to the foot peg location.

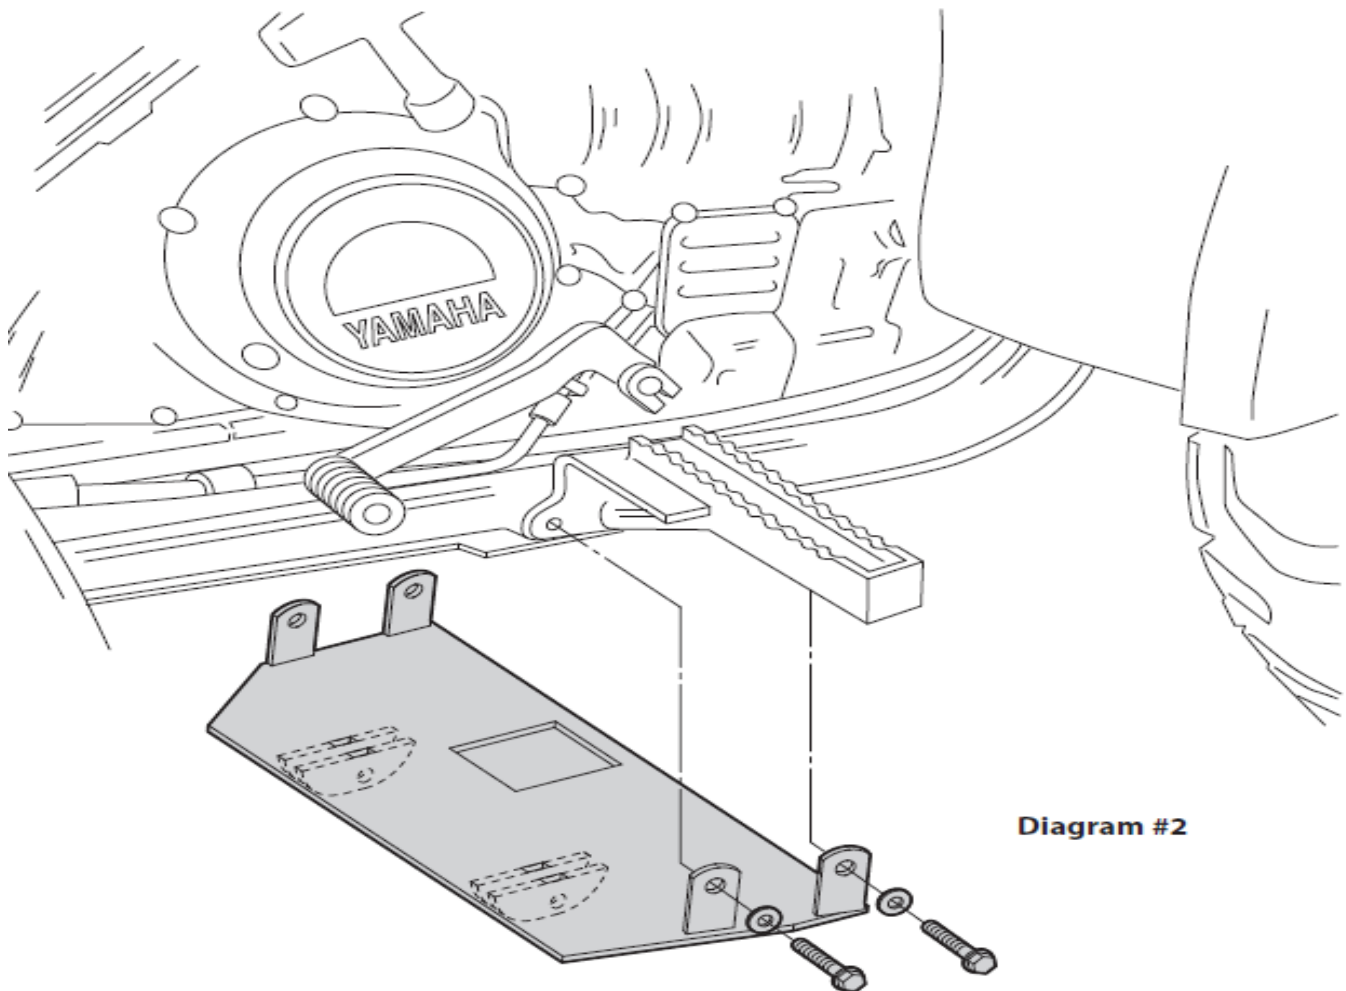


Diagram #2

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).