



**ARCTIC CAT**  
FITS MOST 1996-2015 250,300,  
375, 400, 450, 454 500, 500i,  
550, 650, 700, 1000 4X4's

**SUZUKI**  
1998-07 500 QUADRUNNER/VINSON  
2002-07 400 EIGER  
2008-13 400 KING QUAD


ITEM	PART#	QTY.	DESCRIPTION
1	2795-70	1	Bottom Plow Mount Weldment
2	HDW2148	2	5/16 x 1-1/4 x 2-3/4 Rd. U-Bolt
3	HDW9002	4	5/16 Flat Washer
4	HDW7058	4	5/16 Nylock Nut
5	HDW1069	2	10mm x 30mm Hex Bolt
6	HDW9009	2	7/16 Split Lock Washer
7	HDW9008	8	7/16 Flat Washer

**PART# 4501-0625**

Remove the left and right front foot peg mounting bolts. Retain bolts for use without plow mount installed.

Install the mount plate up under machine as shown with push tube mount tabs toward the front. Use the 10mm bolts with lock washers to install. Use the 7/16" flat washers to go between the mount tab and foot peg bracket to fill any void.

Next swing the front up and attach using the U-bolts, washers and nylock nuts to secure. Tighten back bolts.

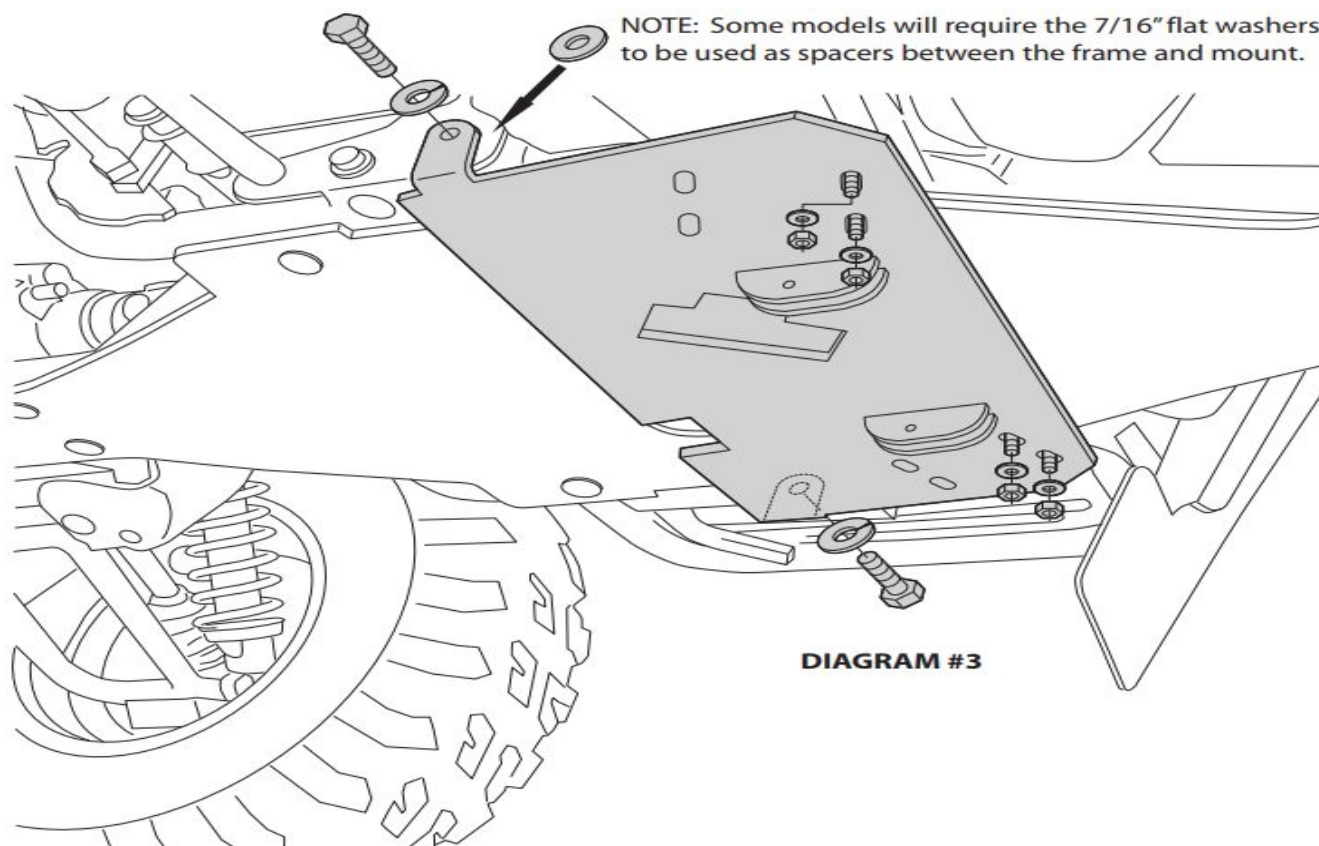

**FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).**

INST2795PF