



PLOW BOTTOM MOUNT  
 14 – 16 CF Moto U-Force 800  
 2016 CF Moto U-Force 500  
 PART# 4501-0649


ITEM	PART#	QTY.	DESCRIPTION
1	2807-70	1	Bottom Mount Plate
2	HDW2073	2	5/16 x 1-1/2 x 3-1/2 Rd. U-Bolt
3	HDW9002	8	5/16 Flat Washers
4	HDW9062	2	5/16 x 2 x 3-1/2 Sq. U-Bolt
5	HDW7058	8	5/16 Nylock Nut
6	2763-2	2	Spacer Block

### BOTTOM MOUNT INSTALLATION INSTRUCTIONS

1. Remove the center skid plate. The wider side of the bottom mount is the FRONT. The wider front 2"x3-1/2" u-bolts (#4) for the front of the bottom mount will install over the main frame tubes before they start to flare outward. This will be just behind the front sway bar mounts. See illustrations on back page.
2. Place the rear 1-1/2"x 3-1/2" u-bolts (#2) over the horizontal frame rail about 17 inches behind the front u-bolts. Place them in about 12 inches apart from each other.
3. Place the front of the bottom mount over the front u-bolts and loosely secure with the 5/16" flat washers and nylock nuts. Let the back of the mount hang down. Install a spacer block (#6) between the bottom mount and rear u-bolt on each side. Push the back of the mount up into place making sure the u-bolts install through the spacers and then through the mount. Loosely secure with the 5/16" flat washers and nylock nuts. Make sure the mount is aligned properly and tighten all the hardware.

*NOTE: If you would like to continue using your skidplate, simply mark the location of each u-bolt and drill out a hole for each one. You can then re-install the skidplate with the u-bolts sticking down through it, put the bottom mount in place and install the washers/nuts.*

4. Using a cut off wheel or reciprocating saw, you can cut off any excess threads hanging down from the u-bolts.
5. Slide the blade/push tube assembly under the ATV. Lift the rear of the assembly up and align the holes in the bottom mount tabs and push tube and install the wire loop pins.

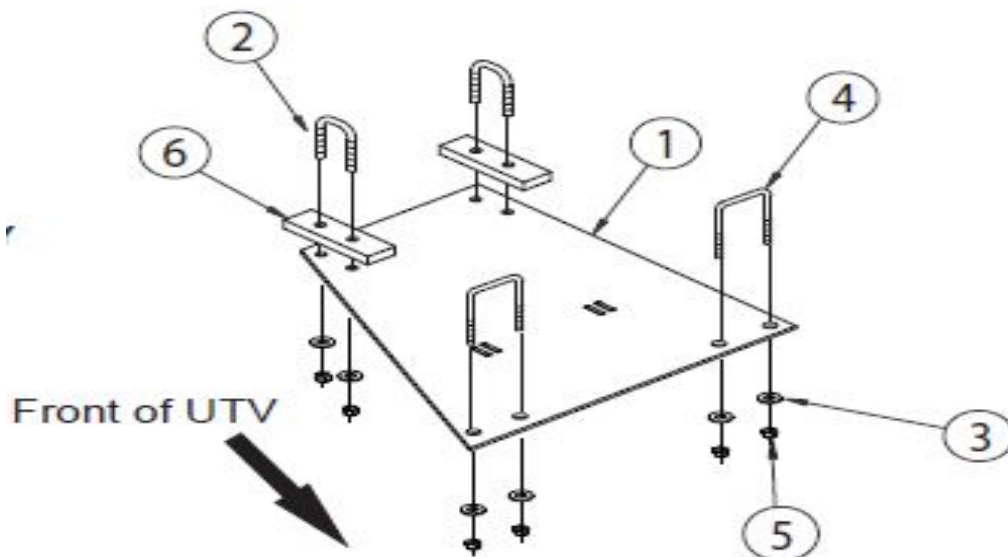

**FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).**



PAGE 2

## BOTTOM MOUNT INSTALLATION INSTRUCTIONS




←  
Front of UTV

Rear U-Bolt position over the center cross member. Place about 12" apart.



←  
Front of UTV

Front U-Bolt position over the main frame tubes in line with the back of the front tires

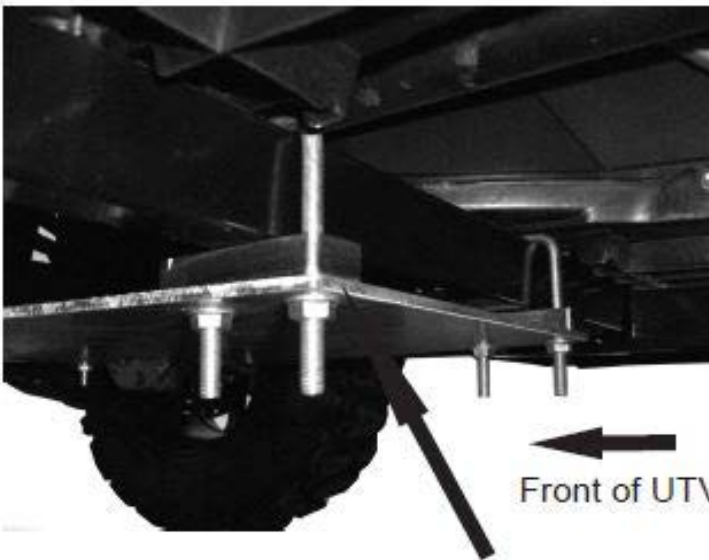

←  
Front of UTV

Place the spacers between the frame rail and bottom mount at the rear u-bolts.



Front of UTV

Completed installation.

**FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).**

INST2807PF-2