


BOTTOM MOUNT INSTALLATION INSTRUCTIONS


Some of the new models will have a larger angled frame tube and will require mounting the plate using all four of the 3/8" x 2"x 3" u-bolts. You will need to use the spacer blocks to accommodate for this. They go on at a slightly different angle as illustrated. Spacer blocks must go between frame tube and plow mount.

Align the mount plate and tighten the bolts securely.

You can mount over the skid plate, but you will have to line up the plate, mark the hole and drill through the skid plate for the u-bolts to hang through.

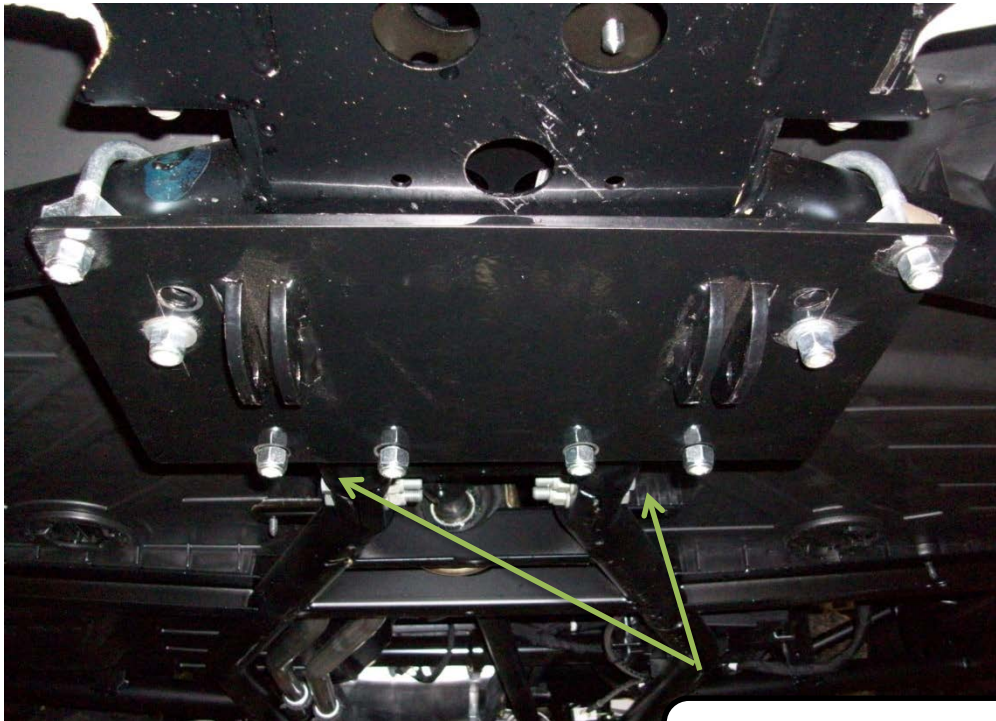

Spacer blocks HDW9424 may need to be used in this location on some models.

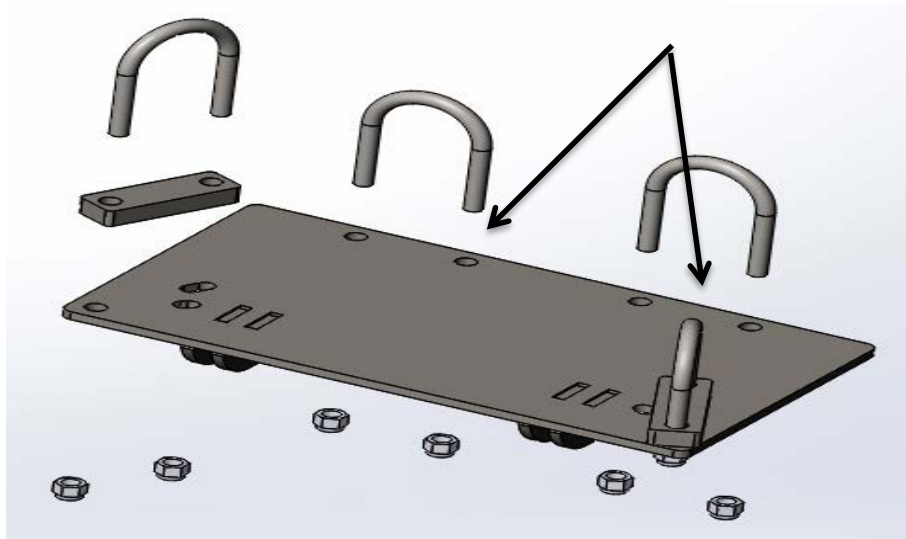

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).


INST2818PF




MOOSE PLOW MOUNT INSTALLATION INSTRUCTIONS
2015-2016 POLARIS RZR 900/900S/XC & 1000
2016 POLARIS GENERAL 1000
PART# 4501-0655

QTY.	PART#	DESCRIPTION
1	2818-100	Bottom Mount Plate
4	HDW9424	Spacer Blocks 1/2 x 3
4	HDW2145	3/8 x 2 x 3 U-Bolt
2	HDW9218	5/16 x 1-1/2 x 2-3/4 Rd. U-Bolt
8	HDW7061	3/8 Nylock Nut
4	HDW7058	5/16 Nylock Nut
2	HDW9001	3/8 Flat washer
4	HDW9002	5/16 Flat Washer

2016 Polaris General 1000 configuration

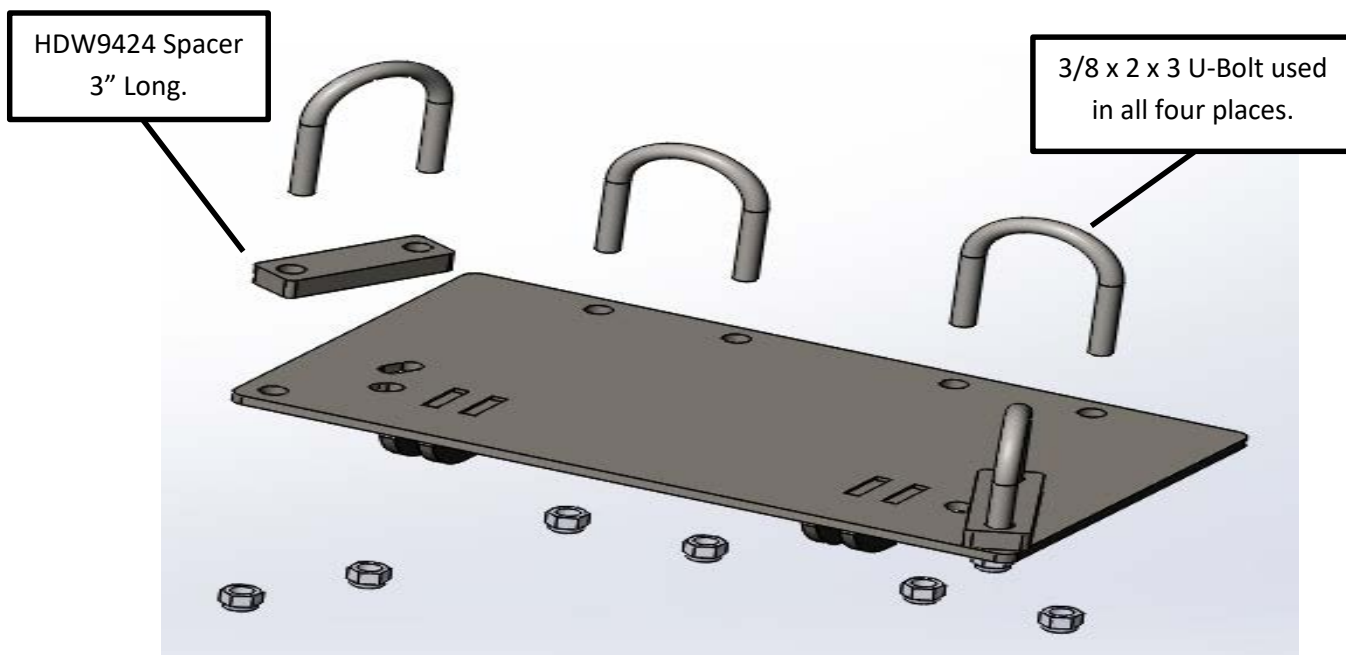

2015-2016 Polaris RZR 900/900S/XC 20014-2016 Polaris RZR 1000 Configuration

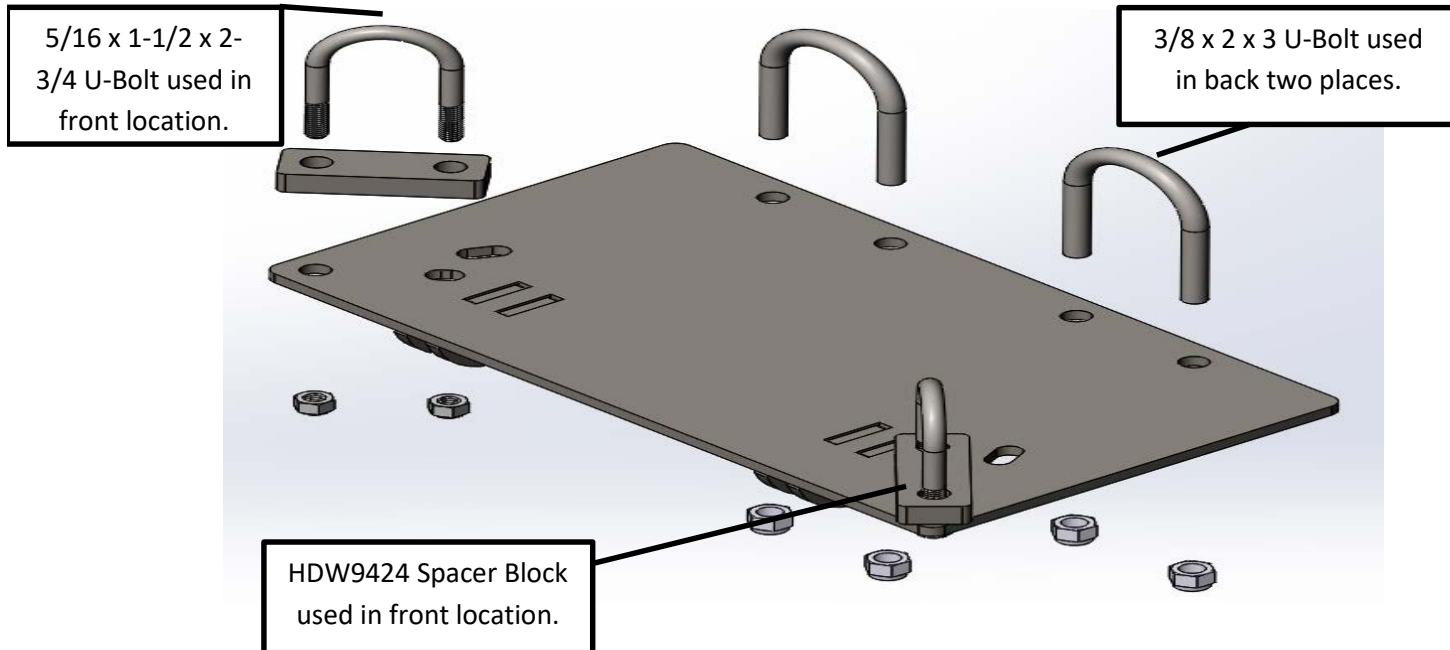

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).

BOTTOM MOUNT INSTALLATION INSTRUCTIONS

POLARIS RZR 1000

1. Hang U-bolts over the main frame tubes as illustrated. The tabs on the mount go forward toward the front of the machine. **NOTE:** The bottom skid can either be removed for installation or can be drilled for the U-bolts to hang through.
2. On the front, use the 5/16 x 1-1/2 x 2-3/4 U-bolts over the angled frame tube where it meets up with the main frame tube as shown. Place two of the 3/8 x 2 x 3 U-bolts over the main frame tube by the cross member as shown. Install the mount plate over the U-bolts making sure to use the spacer blocks between the mount and frame on the front set of U-bolts. Secure in place with the correct size nylock nuts and washer for each pair of U-bolts. Align and tighten. Re-tighten after the first couple of uses to make sure all is secure.



U-bolt placement on the frame tubes.




Install spacer between mount and frame.



Place the over the U-bolts and secure with washers and nylock nuts.

2019 Model has a new full skid plate and will need to be drilled for bolt location and placement unless you want to leave off for snow plowing and replace for regular use.

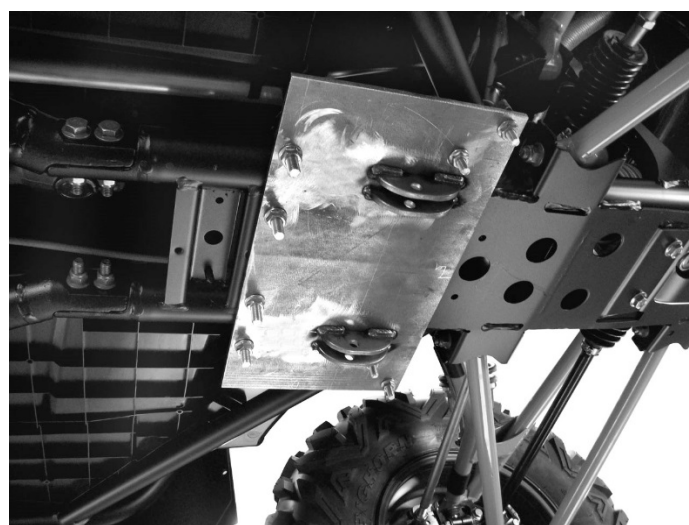

Complete installation shown here.

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).

INST2818PF

