




WINCH MOUNT INSTALLATION INSTRUCTIONS
2004-2013 YAMAHA RHINO 450, 660, 700

PART# 4505-0679

ITEM	QTY.	PART#	DESCRIPTION
1	1	1552-70	Winch Mount Plate
2	4	HDW2051	5/16 x 1 Hex Bolt
3	4	HDW7058	5/16 Nylock Nut
4	8	HDW9002	5/16 Flat Washer

NOTE: Fairlead is not included with this winch mount kit.

1. Remove the front skid plate.
2. Install winch mount plate onto bumper as illustrated with the four 5/16 x 1 hex bolts, washers (top and bottom) and nylock nuts.
3. Winch should be installed so cable is coming off the bottom of the spool or drum.
4. Attach fairlead to mount with hardware provided with winch and wire to their instructions.

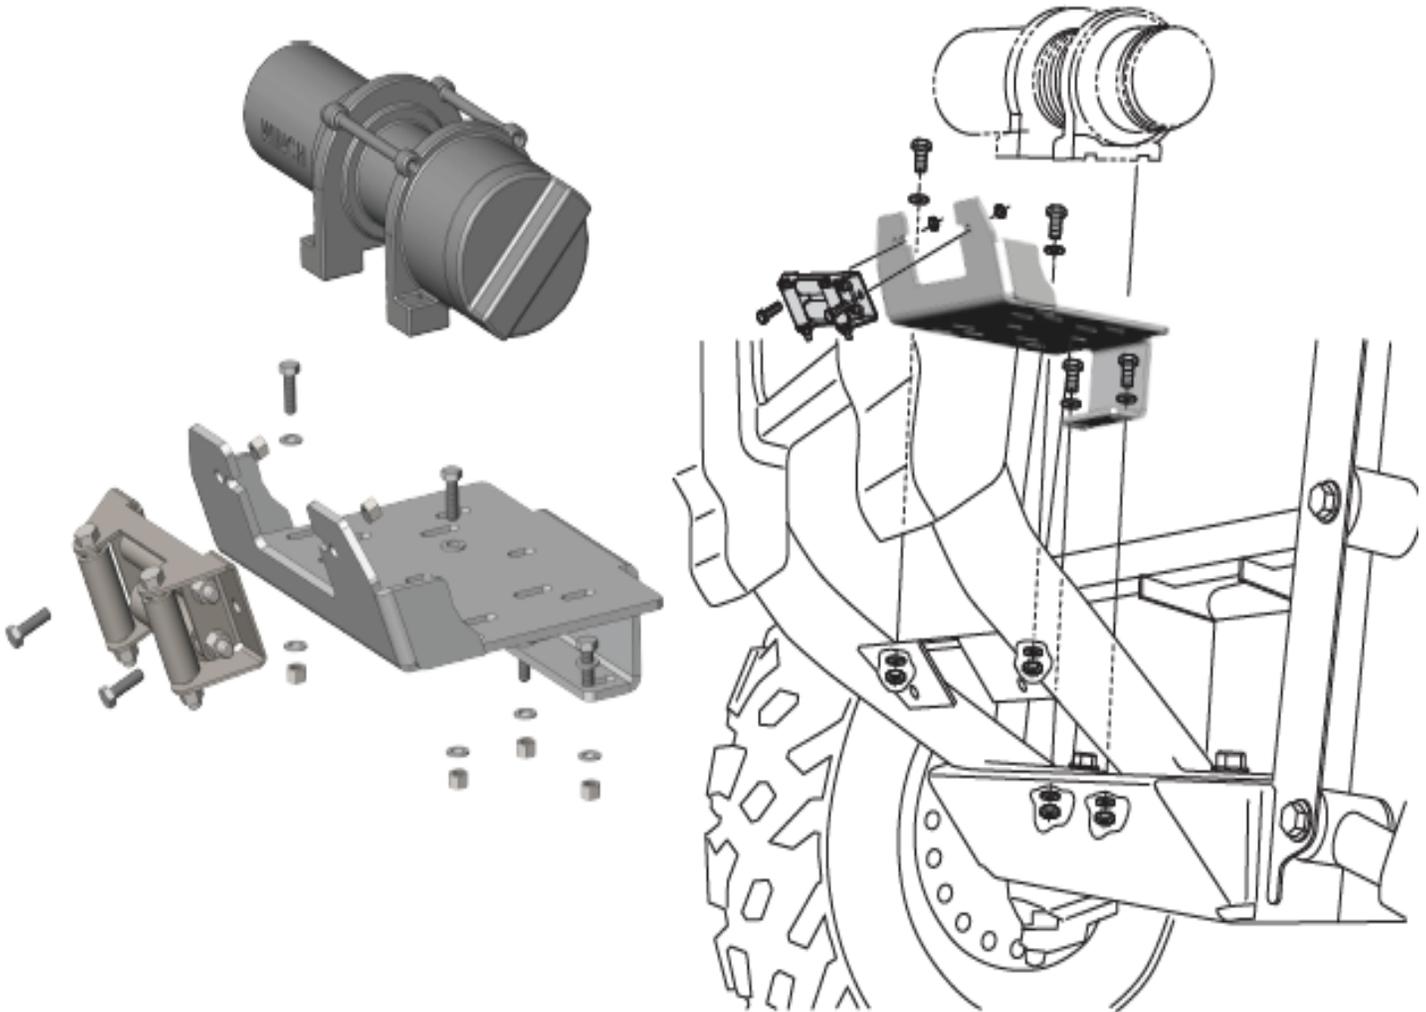

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).