RAVEK

UNLIMITED LIFE TIME WARRANTY

INSTALLATION INSTRUCTIONS FOR SPEAKEASY™ TURN SIGNAL KIT

CLICK TO GO DIRECTLY TO THE PAGE:

1 SPEAKEASY™ VS. FULLY WIRED INSTALL

2 INSTALLATION DETAILS

3 VEHICLE SPECIFIC INSTALLATION INSTRUCTIONS & INSTALL VIDEOS

Proud Partner of

PARTS UNLIMITED

BUILT FOR MORE

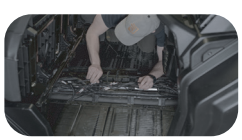
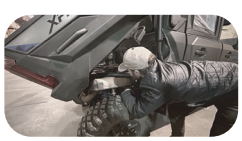
RAVEK

UNLIMITED LIFE TIME WARRANTY

INSTALLATION INNOVATION

WITH WIRELESS FRONT-TO-REAR CONNECTION

ALL OTHER KITS

Install Horn + Controller	
Install Front Blinker Lights	
Install Lever/ Rockers	
Uninstall Panels & Center Tunnel	 ✕
Route Wires: Front to Rear	 ✕
Connect Wires in Rear	 ✕
Reinstall Panels & Center Tunnel	 ✕

SPEAKEASY™

	Install Horn + Controller
	Install Front Blinker Lights
	Install Lever/ Rockers

NO FRONT-TO-REAR WIRING AND CAB TEARDOWN

	Plug Wireless Receiver into OEM Taillight

90% LESS WIRING & UTV TEAR DOWN, ELIMINATING...

~10 PANELS



~45 PUSH PINS & BOLTS



~10FT WIRING



Proud Partner of

PARTS UNLIMITED

BUILT FOR MORE

RAVEK

UNLIMITED LIFE TIME WARRANTY

INSTALLATION INSTRUCTIONS FOR SPEAKEASY™ TURN SIGNAL KIT

THE SPEAKEASY™ TURN SIGNAL KIT INSTALLATION IS CLEAN AND STRAIGHTFORWARD:

STEP 1: MOUNT FRONT CONTROL MODULE & HORN (Plug & Play wired like standard turn signal kits)

STEP 2: INSTALL FRONT RUNNING & TURN LIGHTS (Plug & Play wired like standard turn signal kits)

STEP 3: MOUNT STEERING COLUMN TURN LEVER (or rockers if preferred)

STEP 4: CONNECT DASH INDICATORS (Plug & Play wired like standard turn signal kits)

STEP 5: CONNECT REAR RECEIVER TO OEM TAILLIGHTS AND REAR MAIN HARNESS (Plug & Play wired like standard turn signal kits)

INSTALLATION VIDEO RESOURCES

For a detailed walkthrough of the installation process, see the full installation video.
For a brief overview of the installation process, see the installation overview video.

Questions? Call RAVEK's Wisconsin-based technician support line: 855-617-2787.

Proud Partner of

PARTS UNLIMITED

RAVEK

UNLIMITED LIFE TIME WARRANTY

INSTALLATION INSTRUCTIONS FOR SPEAKEASY™ TURN SIGNAL KIT

TURN LEVER:

MODEL	PART #	INSTALLATION INSTRUCTIONS	INSTALLATION VIDEOS
POLARIS			
Ranger XP 1000	2020-2401	CLICK HERE	CLICK HERE
Ranger XD 1500	2020-2399	CLICK HERE	CLICK HERE
Xpedition	2020-2405	CLICK HERE	CLICK HERE
CAN-AM			
Defender HD11	2020-2393	CLICK HERE	CLICK HERE
Defender HD10	2020-2396	CLICK HERE	COMING SOON
HONDA			
Pioneer	2020-2397	CLICK HERE	CLICK HERE
CFMOTO			
U10	2020-2407	CLICK HERE	CLICK HERE
KAWASAKI			
Ridge	2020-2403	CLICK HERE	CLICK HERE

ROCKERS:

MODEL	PART #	INSTALLATION INSTRUCTIONS	INSTALLATION VIDEOS
POLARIS			
Ranger XP 1000	2020-2402	CLICK HERE	REFER TO LEVER
Ranger XD 1500	2020-2400	CLICK HERE	REFER TO LEVER
Xpedition	2020-2406	CLICK HERE	REFER TO LEVER
CAN-AM			
Defender HD11	2020-2394	CLICK HERE	REFER TO LEVER
Defender HD10	2020-2395	CLICK HERE	REFER TO LEVER
HONDA			
Pioneer	2020-2398	CLICK HERE	REFER TO LEVER
CFMOTO			
U10	2020-2408	CLICK HERE	REFER TO LEVER
KAWASAKI			
Ridge	2020-2404	CLICK HERE	REFER TO LEVER

Proud Partner of

PARTS UNLIMITED